

PARTS LIST

Part No	Description	Qty	Part No	Description	Qty
1	front motor housing	1	23	ball bearing	1
2	screw	3	24	rear plate gasket	1
3	spring washer	3	25	housing	1
4	hammer case gasket	1	26	screw	1
5	bushing	1	27	trigger	1
6	anvil ring	1	28	trigger pin	1
7	O-Ring	1	29	screw	1
8	anvil ring	1	30	spring washer	1
9	hammer pin	2	31	reverse valve knob	1
10	hammer frame	1	32	O-Ring	2
11	rear washer	1	33	reverse valve bushing	1
12	hammer case pilot	1	34	reverse valve	1
13	motor clamp washer	2	35	steel ball	1
14	front bearing	1	36	spring	1
15	front end plate	1	37	throttle valve seat	1
16	cylinder pin	1	38	air inlet pin	1
17	cylinder	2	39	air inlet valve	1
18	hammer	1	40	O-Ring	1
19	exhaust board	1	41	spring	1
20	rotor	1	42	O-Ring	1
21	rotor blade	7	43	air inlet	1
22	rear and plate	1	44	filter	1

Contact the distributor or sales agent from whom you purchase the tool for spare parts ordering for any necessary replacement to get continuous use of tool and for extending the tool life.

When ordering spare parts and components, give each part number and order quantity.

ASSEMBLY DIAGRAM

