

### PARTS LIST

Part No.	Description	Qty.	Part No.	Description	Qty.
1	hammer case assembly	1	23	rear bearing	1
2	screw	3	24	rotor bearing retainer	1
3	spring washer	3	25	housing	1
4	hammer case gasket	1	26	reverse valve knob screw	1
5	hammer case pilot	1	27	spring washer	1
6	bushing	1	28	reverse valve knob	1
7	retainer ring	1	29	reverse valve bushing	1
8	O-ring	1	30	O-ring	2
9	anvil	1	31	steel ball	1
10	hammer pin	2	32	spring	1
11	hammer frame	1	33	reverse valve	1
12	hammer	2	34	set screw	1
13	rear washer	1	35	trigger	1
14	front bearing	1	36	trigger pin	1
15	motor clamp washer	2	37	valve stem	1
16	front end plate	1	38	throttle valve seat	1
17	rotor	1	39	air valve	1
18	rotor blade	6	40	O-ring	1
19	cylinder pin	1	41	spring	1
20	cylinder	1	42	air inlet	1
21	rear end plate	1	43	filter	1
22	rear end plate gasket	1			

Contact the distributor or sales agent from whom you purchase the tool for spare parts ordering for any necessary replacement to get continuous use of tool and for extending the tool life.

When ordering spare parts and components, give each part number and order quantity.

### ASSEMBLY DIAGRAM

