

PARTS LIST

Part No.	Description	Qty.	Part No.	Description	Qty.
1	Main housing	1	22	Gear bracket	1
2	O-ring	1	23	Nut	1
3	Bolt	1	24	Lubricating sleeve	1
4	Spring	1	25	Bearing	1
5	O-ring	1	26	Bias axle	1
6	Screw nut	1	27	Guiding sleeve	1
7	Air inlet	1	28	Ratchet holder	1
8	Trigger	1	29	Ratchet bracket	1
9	Trigger bolt	1	30	Knob	1
10	Bearing	1	31	Spring	1
11	Rear plate	1	32	Top sleeve	1
12	Rotor blade	4	33	Washer	1
13	Rotor	1	34	Ratchet head	1
14	Bolt	1	35	Bolt	1
15	Cylinder	1	36	Ratchet claw	1
16	Front plate	1	37	Cushion	1
17	Bearing	1	38	Block ring	1
18	Spacer	1	39	Spring	2
19	Gear sleeve	1	40	Steel ball	2
20	Gear	3	41	Soft grip	1
21	Bolt	3			

Contact the distributor or sales agent from whom you purchase the tool for spare parts ordering for any necessary replacement to get continuous use of tool and for extending the tool life. When ordering spare parts and components, give each part number and order quantity.

ASSEMBLY DIAGRAM

