

PARTS LIST

Part No.	Description	Qty.	Part No.	Description	Qty.
1	Main housing	1	18	Rotor	1
2	Lever trigger	1	19	Rotor blade	4
3	Lever block	1	20	Cylinder	1
4	Spring	1	21	Bushing	1
5	Bolt	1	22	Front plate	1
6	Bolt	1	23	Steel ball	1
7	O-ring	1	24	Bolt	1
8	O-ring	1	25	Bearing	1
9	Valve stem	1	26	Collet base	1
10	Spring	1	27	Fixing ring	1
11	O-ring	1	28	Decorating ring	1
12	Screw nut	1	29	Protection cover	1
13	Muffler	1	30	Collet	1
14	Inlet nipple	1	31	Collet fixing cap	1
15	Bearing	1	32	Soft grip	1
16	Rear plate	1	33	Spanner (1)	1
17	Steel ball	1	34	Spanner (2)	1

Contact the distributor or sales agent from whom you purchase the tool for spare parts ordering for any necessary replacement to get continuous use of tool and for extending the tool life.

When ordering spare parts and components, give each part number and order quantity.

ASSEMBLY DIAGRAM

