

### PARTS LIST

Part No.	Description	Qty.	Part No.	Description	Qty.
1	oil seal	1	28	reare cover gasket	1
2	screw	4	29	screw	1
3	spring washer	8	30	rear cover protector	1
4	washer	8	31	screw	4
5	front motor housing	1	32	trigger pin	2
6	hammer case gasket	1	33	rear cover	1
7	bushing	1	34	trigger	1
8	anvil washer	1	35	O-ring	1
9	anvil ring	1	36	screw	1
10	O-ring	3	37	air inlet bushing	1
11	anvil	1	38	air inlet pin	1
12	hammer pin	1	39	air closer	1
13	hammer	1	40	spring	1
14	hammer cage	1	41	air inlet	1
15	hammer frame	1	42	filter	1
16	rear washer	1	43	reverse valve pin	1
17	screw nut	4	44	reverse valve bushing	1
18	housing	1	45	reverse knob	1
19	front bearing	1	46	steel ball	1
20	front end plate	1	47	valve spring	1
21	cylinder pin	2	47	knob limit pin	1
22	cylinder	1	49	reverse valve knob	1
23	rotor	1	50	knob pin	1
24	rotor blade	6	51	housing protector	1
25	rear end plate	1	52	handle	1
26	end plate pin	1	53	spring washer	4
27	rear bearing	1	54	screw	4

Contact the distributor or sales agent from whom you purchase the tool for spare parts ordering for any necessary replacement to get continuous use of tool and for extending the tool life.  
When ordering spare parts and components, give each part number and order quantity.

### ASSEMBLY DIAGRAM

