


**PARTS LIST PART-A(machine)**

| Part | Description                      | Qty |
|------|----------------------------------|-----|
| 1    | Front cover decoration block     | 1   |
| 2    | Front cover                      | 1   |
| 3    | Handle(Short)                    | 1   |
| 4    | Switch knob                      | 1   |
| 5    | Pump & motor                     | 1   |
| 6    | Water inlet adapter              | 1   |
| 7    | cablE with plug                  | 1   |
| 8    | Back cover                       | 1   |
| 9    | Right Axle hole cover            | 2   |
| 10   | Left Axle hole cover             | 2   |
| 11   | Gun handle                       | 1   |
| 12   | Insert the gun hole baffle left  | 1   |
| 13   | Insert the gun hole baffle right | 2   |
| 14   | Power cord bracket               | 1   |
| 15   | Normal nozzle                    | 1   |
| 16   | Lance                            | 1   |
| 17   | Gun hold                         | 1   |

### ASSEMBLY DIAGRAM PART-A(machine)

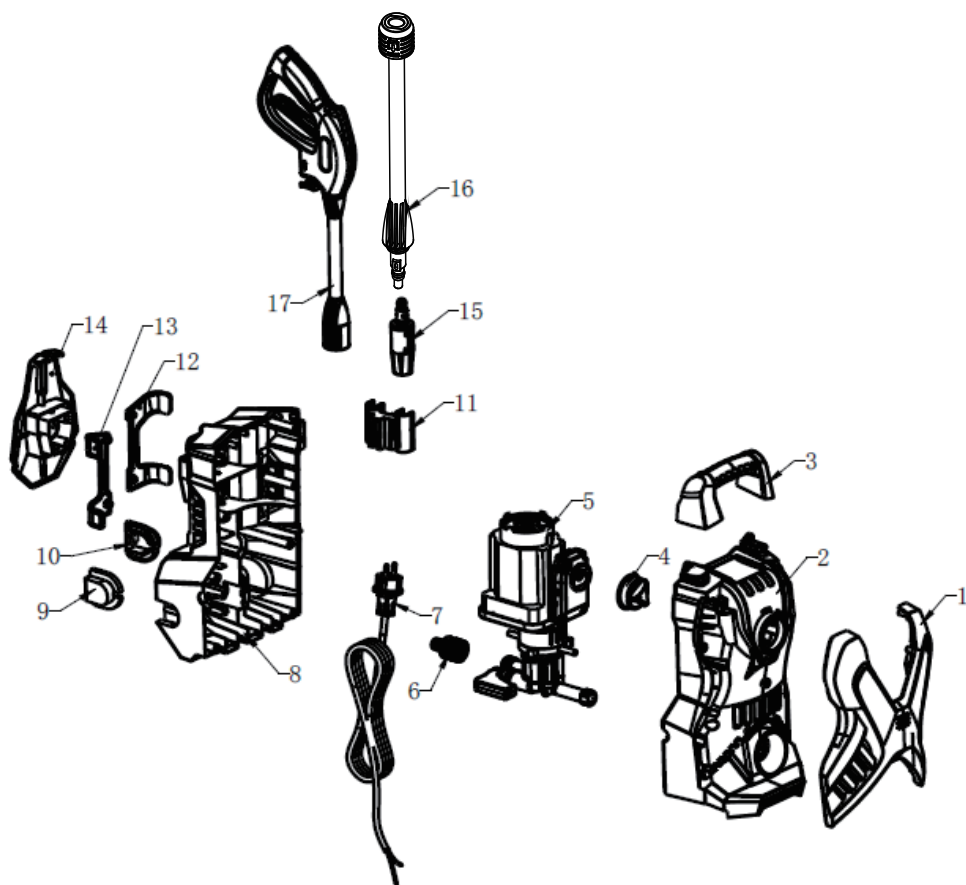

## PARTS LIST PART-B(PUMP)

| Part | Description          | Qty | Part | Description           | Qty |
|------|----------------------|-----|------|-----------------------|-----|
| 1    | Screw                | 3   | 34   | Gearwheel             | 1   |
| 2    | spring gasket        | 3   | 35   | transmission shaft    | 1   |
| 3    | flat gasket          | 3   | 36   | O ring                | 1   |
| 4    | Pump cover           | 1   | 37   | Cylinder gasket       | 1   |
| 5    | seal                 | 1   | 38   | Cylinder              | 1   |
| 6    | General valve spring | 1   | 39   | oil seal ring         | 1   |
| 7    | Valve core           | 1   | 40   | Bearing               | 1   |
| 8    | O ring               | 1   | 41   | Cam                   | 1   |
| 9    | O ring               | 1   | 42   | flat gasket           | 1   |
| 10   | O ring               | 1   | 43   | spring gasket         | 1   |
| 11   | General valve seat   | 1   | 44   | Screw                 | 1   |
| 12   | Valve cover          | 6   | 45   | Thrust bearing        | 1   |
| 13   | O ring               | 6   | 46   | Screw                 | 5   |
| 14   | Valve plates         | 6   | 47   | Rear cover            | 1   |
| 15   | valve spring         | 6   | 48   | Micro switch          | 1   |
| 16   | valve seat           | 6   | 49   | push arm              | 1   |
| 17   | pump                 | 1   | 50   | overflow valve plug   | 1   |
| 18   | Y water seal         | 3   | 51   | O ring                | 1   |
| 19   | Screw                | 3   | 52   | O ring                | 1   |
| 20   | spring gasket        | 3   | 53   | Retaining ring        | 1   |
| 21   | flat gasket          | 3   | 54   | overflow valve spring | 1   |
| 22   | guide ring           | 3   | 55   | push rod              | 1   |
| 23   | Oil seal             | 3   | 56   | push rod seat         | 1   |
| 24   | Plunger frame        | 1   | 57   | O ring                | 1   |
| 25   | O ring               | 1   | 58   | O ring                | 1   |
| 26   | Plunger spring       | 3   | 59   | push rod seat cover   | 1   |
| 27   | Plunger              | 3   | 60   | O ring                | 1   |
| 28   | Plunger spring seat  | 3   | 61   | top cover             | 1   |
| 29   | Screw                | 4   | 62   | inner wire            | 1   |
| 30   | spring gasket        | 4   | 63   | Connector A           | 1   |
| 31   | flat gasket          | 4   | 64   | Connector A gasket    | 1   |
| 32   | motor                | 1   | 65   | filter                | 1   |
| 33   | Bearing              | 1   | 66   | screw                 | 1   |

### ASSEMBLY DIAGRAM PART-B(PUMP)

