


PARTS LIST PART-A(MACHINE)

Part	Description	Qty
1	Front cover decoration block	1
2	Front cover	1
3	Handle(long)	1
4	Pump & motor	1
5	hose rack	1
6	Back cover	1
7	Right gun Baffle	1
8	Left gun Baffle	1
9	Cable rack	2
10	Wheel cover	2
11	Left wheel shaft	1
12	Right wheel shaft	1
13	Wheels	2
14	Wind shield	1
15	Switch	1
16	Switch box	1
17	switch joint	1
18	Switch knob	1
19	Gun hold	1
20	Lance	1
21	Normal nozzle	1
22	Gun handle	1

ASSEMBLY DIAGRAM PART-A(MACHINE)

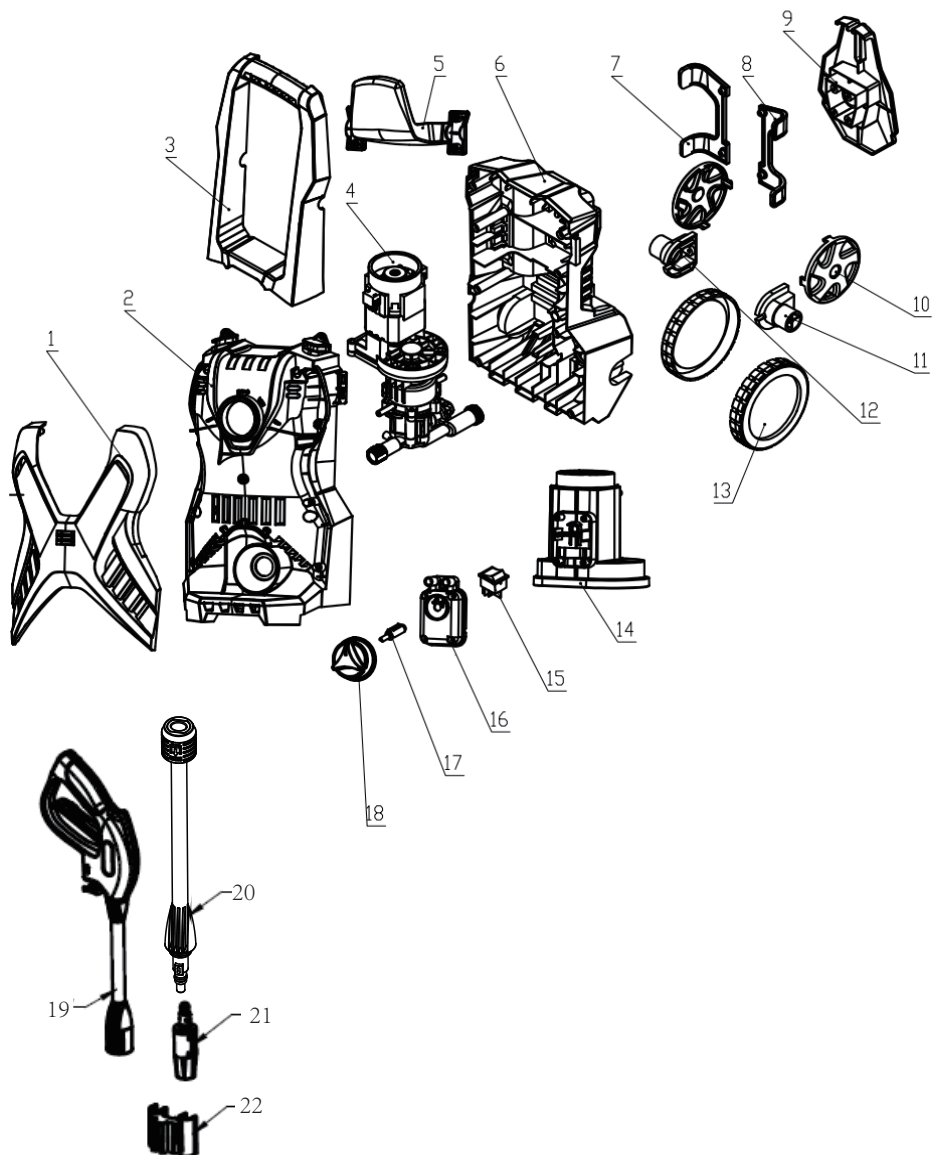

PARTS LIST PART-B(PUMP)

Part	Description	Qty	Part	Description	Qty
1	Screw	3	34	Gearwheel	1
2	spring gasket	3	35	transmission shaft	1
3	flat gasket	3	36	O ring	1
4	Pump cover	1	37	Cylinder gasket	1
5	seal	1	38	Cylinder	1
6	General valve spring	1	39	oil seal ring	1
7	Valve core	1	40	Bearing	1
8	O ring	1	41	Cam	1
9	O ring	1	42	flat gasket	1
10	O ring	1	43	spring gasket	1
11	General valve seat	1	44	Screw	1
12	Valve cover	6	45	Thrust bearing	1
13	O ring	6	46	Screw	5
14	Valve plates	6	47	Rear cover	1
15	valve spring	6	48	Micro switch	1
16	valve seat	6	49	push arm	1
17	pump	1	50	overflow valve plug	1
18	Y water seal	3	51	O ring	1
19	Screw	3	52	O ring	1
20	spring gasket	3	53	Retaining ring	1
21	flat gasket	3	54	overflow valve spring	1
22	guide ring	3	55	push rod	1
23	Oil seal	3	56	push rod seat	1
24	Plunger frame	1	57	O ring	1
25	O ring	1	58	O ring	1
26	Plunger spring	3	59	push rod seat cover	1
27	Plunger	3	60	O ring	1
28	Plunger spring seat	3	61	top cover	1
29	Screw	4	62	inner wire	1
30	spring gasket	4	63	Connector A	1
31	flat gasket	4	64	Connector A gasket	1
32	motor	1	65	filter	1
33	Bearing	1	66	screw	1

ASSEMBLY DIAGRAM PART-B(PUMP)

