

## PARTS LIST

| Part | Description             | Qty | Part | Description              | Qty |
|------|-------------------------|-----|------|--------------------------|-----|
| 1    | Rubber boot             | 1   | 68   | Inner tooth washer       | 1   |
| 2    | Bearing                 | 1   | 69   | Moving guard wheel       | 1   |
| 3    | Armature                | 1   | 70   | Locknut                  | 1   |
| 4    | Stator                  | 1   | 71   | Moving guard cover plate | 1   |
| 5    | Screw                   | 2   | 72   | Moving guard             | 1   |
| 6    | Fan baffle              | 1   | 73   | Torsion spring           | 1   |
| 7    | Small cord protector    | 1   | 74   | Special screw            | 1   |
| 8    | Lower handle            | 1   | 75   | Moving guard plate       | 1   |
| 9    | Cord clamp              | 1   | 76   | Special screw            | 1   |
| 10   | Screw                   | 2   | 77   | Center plate             | 1   |
| 11   | Cord protector          | 1   | 78   | Big washer               | 3   |
| 12   | Cord plug               | 1   | 79   | Linkage support          | 1   |
| 13   | Upper handle            | 1   | 80   | Bolt                     | 1   |
| 14   | Screw                   | 3   | 81   | Rivet                    | 3   |
| 15   | Washer                  | 2   | 82   | Linkage C                | 1   |
| 16   | Spring washer           | 2   | 83   | Washer                   | 1   |
| 17   | Screw                   | 2   | 84   | Linkage B                | 1   |
| 18   | Screw                   | 1   | 85   | Shoulder screw           | 1   |
| 19   | Trigger spring          | 1   | 86   | Linkage A                | 1   |
| 20   | Trigger                 | 1   | 87   | Shoulder screw           | 1   |
| 21   | Terminal                | 1   | 88   | Pivot block              | 1   |
| 22   | Switch                  | 1   | 89   | Big torsion spring       | 1   |
| 23   | Screw                   | 2   | 90   | Washer                   | 1   |
| 24   | Shield lock piece       | 1   | 91   | Spring washer            | 1   |
| 25   | Small torsion spring    | 1   | 92   | Screw                    | 1   |
| 26   | Locknut                 | 1   | 93   | Bevel pointer            | 1   |
| 27   | Shield lock sheet       | 1   | 94   | Bevel pivot              | 1   |
| 28   | Screw                   | 1   | 95   | Bevel block              | 1   |
| 29   | Washer                  | 2   | 96   | Bevel knob               | 1   |
| 30   | Spring washer           | 2   | 97   | Special washer           | 1   |
| 31   | Screw                   | 2   | 98   | Socket head screw        | 2   |
| 32   | Spindle lock pin        | 1   | 99   | Nut                      | 2   |
| 33   | Spindle lock pin spring | 1   | 100  | Socket head screw        | 4   |
| 34   | E clip                  | 1   | 101  | Bevel scale plate        | 1   |
| 35   | Fixed guard             | 1   | 102  | Sunk screw               | 2   |
| 36   | PM sleeve               | 1   | 103  | Turntable                | 1   |
| 37   | C clip                  | 1   | 104  | Sunk screw               | 1   |
| 38   | Gear                    | 1   | 105  | Cutting insert           | 1   |
| 39   | Spindle lock stop plate | 1   | 106  | Sunk screw               | 1   |
| 40   | Bearing                 | 1   | 107  | Pointer                  | 1   |
| 41   | Big screw               | 2   | 108  | Extend pole              | 2   |
| 42   | Gear case cover         | 1   | 109  | Socket head screw        | 2   |
| 43   | Spring washer           | 2   | 110  | Base                     | 1   |
| 44   | Screw                   | 2   | 111  | Bolt knurled             | 1   |
| 45   | Spindle                 | 1   | 112  | Detent roll              | 1   |
| 46   | Key                     | 1   | 113  | Detent spring            | 1   |
| 47   | Blade flange inner      | 1   | 114  | Hex gurb screw           | 1   |
| 48   | Blade                   | 1   | 115  | Fence                    | 1   |
| 49   | Blade flange outer      | 1   | 116  | Knob                     | 1   |
| 50   | Blade screw             | 1   | 117  | Screw                    | 1   |
| 51   | Rolled pin              | 1   | 118  | Clamp                    | 1   |
| 52   | Locking pin             | 1   | 119  | Support arm              | 1   |
| 53   | Locking pin spring      | 1   | 120  | Workpiece knob           | 1   |
| 54   | Bearing                 | 1   | 121  | Knob                     | 1   |
| 55   | Locking pin cap         | 1   | 122  | Support pole             | 1   |
| 56   | Washer                  | 1   | 124  | Socket head screw        | 2   |
| 57   | Locknut                 | 1   | 125  | Knob                     | 1   |
| 58   | Washer                  | 4   | 126  | Nylon brake              | 1   |
| 59   | Spring washer           | 4   | 127  | Pivot shaft              | 1   |
| 60   | Screw                   | 4   | 128  | Spring washer            | 2   |
| 61   | Motor housing           | 1   | 129  | Washer                   | 2   |
| 62   | Brush                   | 2   | 130  | Locknut                  | 1   |
| 63   | Brush spring            | 2   | 131  | Washer                   | 1   |
| 64   | Brush hold              | 2   | 132  | Socket head screw        | 1   |
| 65   | Screw                   | 4   | 133  | Butterfly spring         | 1   |
| 66   | Motor housing cover     | 1   | 134  | Wave washer              | 1   |
| 67   | Screw                   | 2   |      |                          |     |

### ASSEMBLY DIAGRAM

