

PARTS LIST

Part	Description	Qty	Part	Description	Qty
1	dust proof cover	1	57	screw M5×16	2
2	D19 spindle steel circlip	1	58	armature	1
3	limit cover	1	59	spring	1
4	sleeve	1	60	bearing 608	1
5	sleeve spring	1	61	608 bearing cover	1
6	front cover	1	62	housing	1
7	screw M5×30	4	63	screw M5×40	4
8	oil seal	1	64	brush holder	2
9	washer	1	65	carbon brush	2
10	D35 spindle steel circlip	1	66	flat spring	2
11	bearing 61907	1	67	screw ST2.9×12	8
12	L washer	1	68	rear housing	1
13	damping ring	1	69	screw ST4.2X16	8
14	rotating sleeve	1	70	fan guide	1
15	steel ballφ7.14	5	71	screw	2
16	O ring	2	72	stator	1
17	O ring	2	73	cable and plug	1
18	strike rod	1	74	cable sleeve	1
19	steel ballφ7.938	3	75	screw cap	2
20	cylinder	1	76	handle	1
21	flat washer	2	77	cable plate	1
22	spacer bush	1	78	trigger	1
23	spring	1	79	switch stents	1
24	spring	1	80	switch	1
25	D50 spindle steel circlip	1	81	handle cover	1
26	washer	1	82	spring	2
27	clutch spring	1	83	screw	2
28	cylinder liner gear	1	84	suspension bridge	1
29	D32 spindle steel circlip	1	85	screw	2
30	strike hammer	1	86	crankshaft gear	1
31	O ring	2	87	push rod	1
32	piston	1	88	flat washer	1
33	piston pin	1	89	crankshaft spring	1
34	link rod	1	90	D17 spindle steel circlip	1
35	oil bearing	1	91	D35 hole circlip A type	1
36	D47 hole circlip A type	1	92	6003 bearing	1
37	oil bearing	1	93	screw	1
38	small pinion	1	94	knob	1
39	bearing 6002	1	95	spring	2
40	washer	1	96	button	1
41	friction plate gasket	2	97	D18 spindle steel circlip	1
42	friction plate	2	98	washer	1
43	clutch gear	1	99	knob core	1
44	spring 16	1	100	gear box	1
45	nut	1	101	crankshaft	1
46	bearing 627	1	102	O ring	1
47	shaft sleeve	1	103	oil cap	1
48	oil bearing	1	104	cover	1
49	middle cover	1	105	screw	3
50	O ring	2	106	cover	1
51	knob core	1	107	side handle	1
52	spring	1	108	gauge block	1
53	knob	1	109	holder	1
54	screw M4×10	1	110	clamp	1
55	bearing 6001	1	111	screw M8X50	1
56	6001 bearing plate	1			

ASSEMBLY DIAGRAM

