

PARTS LIST

Part No.	Description	Qty.	Part No.	Description	Qty.
1	Housing	1	22	Anvil	1
2	Valve sleeve	1	23	Hammer cage	1
3	F/R valve stem	1	24	Hammer pin	1
4	O-ring	1	25	Hammer dog	1
5	Gasket	1	26	Drive cam	1
6	Bolt	1	27	Bearing	2
7	Steel ball	1	28	Front plate	1
8	Spring	2	29	Fxing pin	1
9	Inlet nipple	1	30	Rotor blade	6
10	O-ring	1	31	Rotor	1
11	Air flow regulator	1	32	Cylinder	1
12	Screw	1	33	Rear plate	1
13	Trigger	1	34	Fxing pin	1
14	Trigger bolt	1	35	Gasket	1
15	Bolt	1	36	Rear cover	1
16	Spring	1	37	Cushion	4
17	Screw	1	38	Cap screw	4
18	Screw	1	39	Back rubber scuff	1
19	Muffler	1	40	Front rubber scuff	1
20	Screw	2	41	Soft grip	1
21	Axle sleeve	1	42	Hex key	1

Contact the distributor or sales agent from whom you purchase the tool for spare parts ordering for any necessary replacement to get continuous use of tool and for extending the tool life. When ordering spare parts and components, give each part number and order quantity.

ASSEMBLY DIAGRAM

