

PARTS LIST

Part	Description	Qty	Part	Description	Qty
1	Screw	8	32	Spindle lock pin	1
2	Washer	12	33	Circlip	1
3	Upper handle	1	34	Spindle lock pin spring	1
4	Tapping screw	8	35	Fixguard	1
5	Power cord and plug	1	36	Dust chimney	1
6	Cable sheath	1	37	Screw	2
7	Power cord press plate	1	38	Bearing	1
8	Screw	2	39	Armature	1
9	Spring washer	7	40	Bearing sleeve	1
10	Lower handle	1	41	Tapping screw	2
11	Switch trigger Assembly	1	42	Stator	1
11-1	Switch trigger	1	43	Fan baffle	1
11-2	Switch trigger key	1	44	Inner wire sleeve	1
11-3	Spring	1	45	Brush holder	2
11-4	Pin	1	46	Carbon Brush spring	2
12	Trigger spring	1	47	Tapping screw	4
13	Micro-switch	1	48	Motor housing	1
14	Dust bag	1	49	Carbon brush	2
15	Brand label	1	50	End cap	1
16	Big torsional spring	1	51	Rating label	1
17	Torsional spring sleeve	1	52	Warning label	1
18	Pivot shaft	1	53	lock nut	1
19	Inner flange	1	54	Washer	1
20	Spindle	1	55	Moving guard cover plate	1
21	Flat key	1	56	Torsional spring	1
22	Screw	8	57	Shoulder screw	1
23	Spring washer	7	58	Screw	1
24	Gear box cover	1	59	Moving guard support	1
25	Bearing	1	60	hex bolt	1
26	Screw	2	61	Hex screw	1
27	Spindle lock stop plate	1	62	Inner flange	1
28	Gear	1	63	Blade	1
29	Shaft circlip	1	64	Inner tooth washer	1
30	Bearing	2	65	Moving guard wheel	1
31	Spindle lock stop plate	1	66	Moving guard	1

PARTS LIST

Part	Description	Qty	Part	Description	Qty
67	Linkage	1	102	Clamp arm	1
68	Shoulder screw	1	103	Knob	1
69	Wave washer	1	104	Support pole	1
70	Shoulder screw	1	105	Clamp press plate	1
71	Screw	5	106	Hex screw	4
72	Kerft plate	1	107	Spring washer	4
73	Washer	4	108	Washer	4
74	Miter indicator	1	109	Fence	1
75	Turn table	1	110	Screw	2
76	Arm	1	111	Hex key	1
77	Socket screws	1	112	Hex key store	1
78	Washer	1	113	Base	1
79	Bevel Scale	1	114	Mitre angle label	1
80	Socket screws	1	115	Locknut	1
81	Hex nut	2	116	Wave washer	1
82	Lock nut	1	117	Socket screws	1
83	Washer	2	118	Cross head screws	1
84	Rotary shaft	1	119	Lower blade guard	1
85	Lock pin	1	120	Cross head screws	2
86	O-ring	1	121	Screws	1
87	Lock pin knob	1	122	Left fence extension block	1
88	Bevel locker	1	123	Capacitor	1
89	Hex bolt	1	124	Terminal	1
90	Washer	1	125	Cross head screws	1
91	Bevel indicator	1	126	Dust connetor port	1
92	Hex nut	2	127	Lock nut	1
93	Screw	2	128	Transformer	1
94	Mitre angle lock rod	1	129	Lasr Switch	1
95	Mitre handle	1	130	Laser	1
96	Handle cap	1	131	Laser holder	1
97	Button	1	132	Hex screw	1
98	Mitre angle location spring plate	1	133	Cross head screws	1
99	Spring washer	6	134	Extension bar	2
100	Hex screw	2	135	Knob	2
101	Work clamp knob	1			

ASSEMBLY DIAGRAM

