

PARTS LIST AND DIAGRAM

The manufacturer and/or distributor has provided the parts list and assembly diagram in this manual as a reference tool only. neither the manufacturer or distributor makes any representation or warranty of any kind to the buyer that he or she is qualified to make any repairs to the product, or that he or she is qualified to replace any parts of the product. in fact, the manufacturer and/or distributor expressly states that all repairs and parts replacements should be undertaken by certified and licensed technicians, and not by the buyer. the buyer assumes all risk and liability arising out of his or her repairs to the original product or replacement parts thereto, or arising out of his or her installation of replacement parts thereto.

Part	Description	Qty.	Part	Description	Qty.
1	inductor	2	19	plate holder	1
2	stator	1	20	washer	1
3	switch button	1	21	bearing 6001RS	1
4	switch	1	22	eccentric block	1
5	brush box	2	23	washer	1
6	brush holder	2	24	Tapping screw M4X10	1
7	carbon brush	2	25	spring washer	1
8	housing	1	26	vibration block 2	1
9	bearing 607RS	1	27	Tapping screw ST2.9X9	5
10	rotor	1	28	base plate	1
11	bearing 607RS	1	29	capaitor	1
12	fan	1	30	terminal block	1
13	4.5 oil shaft	1	31	cord clamp	1
14	wool felt	1	32	cord guard	1
15	vibration block 1	1	33	power cord	1
16	screw ST2.9X9	4	34	dust bag assemble	1
17	dust outlet	1	35	screw ST3.9X12	4
18	wool felt	1	36	screw ST3.9X17	7

ASSEMBLY DIAGRAM

