

PARTS LIST

No.	Description	No.	Description
1	Aluminum head shell	17	Motor cover
2	needle bearing	18	Cross disc head machine tooth screw
3	T-shaped output shaft	19	Hexagonal socket screw
4	Impact block component	20	3.5 Elastic flat gasket
5	planet gear	21	Housing
6	Cylindrical pin	22	Switch
7	Support pin gasket	23	Forward and reverse rotation lever
8	Bearing 698-2RS	24	Speed control button
9	O-ring	25	controller+plug
10	Double layer spiral retaining ring	26	Lamp panel+lampshade
11	Internal gear ring	27	Shock absorber block
12	Aluminum casing of gearbox	28	Self tapping screw 4×14
13	Bearing 16003	29	Self tapping screw 3×14
14	Rotor	30	Back cover
15	Stator	31	Self tapping screw 3×16
16	Bearing 608		

ASSEMBLY DIAGRAM

