

PART LIST

No.	Description	No.	Description
1	self tapping screw ST4*20 (type T)	2-17	609-2Z bearing
2	hulk head shell	2-18	woodruff key
2-1	combination screw	2-19	the connecting shaft
2-2	the output shaft	2-20	M5×8 cross head screw
2-3	woodruff key(45#)	2-21	drive plate
2-4	front cover	3	upper platen
2-5	cross head screwM4×8	4	press table
2-6	bearing	5	ic module+bracket+motor
2-7	circlip	6	switch the push rod
2-8	big gear (40Cr)	7	spring
2-9	shaft sleeve	8	push button switch
2-10	aluminum head shell	9	left and right chassis
2-11	shaft with spring	10	tapping screw
2-12	self-locking spring(65Mn)	11	micro switch
2-13	self-locking button	12	battery pack (not included)
2-14	shaft with elastic retainer	13	auxiliary handle
2-15	oil bearing pinion	14	spanner
2-16	(40Cr)pinion	15	grinding wheel guard

ASSEMBLY DIAGRAM

