

PARTS LIST

No.	Description	No.	Description
1	screw	28	shaft lock button
2	back cover	29	bearing seat
3	wrench	30	Screw
4	screw	31	Nut
5	shell	32	Left alu
6	rubber pad	33	Backstop pad
7	switch	34	Screw
8	sprint	35	Movable shield spring
9	handspike	36	Movable shield
10	motor	37	Movable shield plate
11	adaptor block	38	Screw
12	rubber pad	39	Lower splint 2 size: Ø20mm and 5/8"
13	screw	40	Allow saw blade
14	center bracket	41	Upper splint
15	screw	42	Shim
16	needle bearing	43	Screw
17	ball bearing	44	Right alu
18	small gear	45	Interface
19	shaft ring	46	Wrench
20	wave washer	47	Platen locking knob
21	drive gear	48	Cattage screw
22	shaft lock block	49	Nut
23	spindle	50	Wrench
24	flat key	51	Base plate
25	circlip for hole	52	Connecting pin
26	ball bearing	53	Guide
27	spring		

ASSEMBLY DIAGRAM

