

PARTS LIST

No.	Description	No.	Description
1	blade subassembly	23	blade'connecting pin
2	switch button spring	24	connect wire
3	top cover of second handle	25	left decoration cover
4	tapping screw	26	eccentric block
5	protect cover	27	left housing cover
6	microswitch	28	microswitch
7	trigger of second handle	29	plug in holder
8	lower cover of second handle	30	controller
9	Inner quintuple screw	31	Wiring harness components
10	pressing plate	32	connect wire
11	motor	33	switch button
12	connect wire	34	switch button spring
13	motor holder	35	right housing cover
14	motor gear	36	right decoration cover
15	planetary gear	37	cover of gear case
16	centre frame	38	bearing
17	annular gear	39	blade presing plate
18	output tray	40	insulate gasket
19	gear case	41	Bolt
20	bearing	42	gasket
21	output shaft	43	sponge
22	blade presing plate	44	locknut

ASSEMBLY DIAGRAM

