

PARTS LIST

No.	Description	Qty	No.	Description	Qty
1	Left housing	1	25	O-ring for needle	2
2	Left housing (TPE)	1	26	Needle nozzle	1
3	right housing	1	27	Fixed nozzle	1
4	Right housing(TPE)	1	28	Change nozzle	1
5	housing buckle cover	1	29	Nut	1
6	Air filter cotton	1	30	Spring for switch	1
7	Motor seat cover	1	31	Switch rod	1
8	Motor	1	32	Microswitch	1
9	Motor cover	1	33	Insert spring	2
10	Screw for cord clamp	2	34	Connector parts	1
11	O-ring for motor seat sealing	1	35	Battery	1
12	Air one-way valve	1	36	Container bottom	1
13	Motor seat	1	37	Container	1
14	Spring for trigger	1	38	Trigger	1
15	Unlock button	1	39	Fluid control knob	1
16	Seat	1	40	Straw sealing gasket	1
17	O-ring for spray gun seat	1	41	Straw	1
18	Pin	1	42	Revervoir gasket	1
19	Gun seat	1	43	Nameplate	2
20	Needle spring	1	44	Screw	7
21	Needle end	1	45	Plus straw	1
22	Lock for wire	1	46	PCBA	1
23	Spring for trigger	2	47	Screw	1
24	Needle spring	1			

ASSEMBLY DIAGRAM

