

PARTS LIST

No.	Description	Qty	No.	Description	Qty
1	Pin	1	34	Positioning sleeve	2
2	Right foot board	1	35	Reciprocating rod	1
3	Right casing	1	36	Slider	1
4	Cross recessed pan head tapping screw ST4*16	10	37	Lift the knife, slide the block, and press the plate	1
5	Left foot plate	1	38	Cross recessed pan head screw M5*14 (three-in-one set)	4
6	Controller (with speed regulation)	1	39	626 bearing spacer	2
7	Decorative cover for air vent	1	40	626 bearing pin	1
8	Signal switch	1	41	Slider press plate	1
9	Speed adjustment dial + pad printing	1	42	Short guide pin	1
10	Left casing	1	43	Cylindrical pin Ø5x12.5	4
11	Stator	1	44	Counterbalance spacer	3
12	626-2RS bearing	2	45	Two sets of needle roller bearings HK071408	1
13	Rotor	1	46	Cylindrical pin Ø7x17	1
14	Shim	1	47	Hexagon socket head cap screw M5*18	2
15	Pan head screw M4*12	10	48	Eccentric connection block	1
16	6001 bearing pressing block	1	49	Large gear	1
17	6001-2RS bearing	1	50	Counterweight	1
18	Elastic retainer ring for shaft Ø12	1	51	Steel sleeve	1
19	Head capsule	1	52	Output shaft	1
20	Cross head self-tapping screw ST4*25	4	53	Bearing 6201-2RS	2
21	Cross head screw M4*8	1	54	Pan head screw M5*8	2
22	Knife lifting knob	1	55	Flat washer	1
23	Knife lifting knob spring	1	56	Hexagon socket head cap screw M5*12	1
24	Steel ball Ø4	1	57	Saw frame reset spring	1
25	Lift the knife and sell	1	58	Quickly replace the lock base	1
26	Knife lifting knob base	1	59	Saw frame pressing plate	1
27	Split washer Ø4	2	60	Pan head screw M5*8	2
28	Fixed cylindrical pin	1	61	Quick change button	1
29	Lampshade	1	62	Lower support frame	1
30	Upper support frame	1	63	Cover	1
31	Reset spring	2	64	Leather case pressing plate	1
32	Aluminum movable support	1	65	Saw frame assembly	1
33	Long guide pin	2	66	Woodworking saw blade	1

ASSEMBLY DIAGRAM

