

PARTS LIST

No.	Description	Qty	No.	Description	Qty
1	Rubber head cover/3615	1	17	Rotor	1
2	Aluminum head shell	1	18	Stator	1
3	Output shaft spacer	1	19	Bearing 698-2RS	1
4	T-shaped output shaft	1	20	Positive and negative rotation lever	1
5	Impact block assembly	1	21	Switch	1
6	Planetary gear	3	22	Speed adjustment button	1
7	Cylindrical pin	3	23	Controller	1
8	Support pin shaft gasket	1	25	Lamp panel + Lampshade	1
9	O-ring	1	24	Electric wrench switch pin	1
10	Double-layer spiral retaining ring	1	26	Case	1
11	Internal gear ring	1	27	Rear cover	1
12	Bearing 6805-2RS	1	28	Cross head self-tapping screw	4
13	Rubber gasket	1	29	Cross head self-tapping screw	5
14	Gearbox aluminum shell	1	30	Cross head self-tapping screw	5
15	Bearing 6900	1	31	Electric wrench belt buckle	1
16	Hexagon socket machine screw	4	32	Cross head machine screw with flat washer and spring	1

ASSEMBLY DIAGRAM

