

PARTS LIST

No.	Description	Qty	No.	Description	Qty
1	Front handle	1	30	steel wire hook	1
2	Screw ST3 * 30	2	31	hook pressure plate	1
3	Protective board	1	32	Brushless controller	1
4	Screw ST4 * 16	16	33	anti lock button	1
5	HOUSING	1	34	switch trigger	1
6	Screw ST5 * 20	2	35	Shift spring Ø0.4xØ4x15x12	1
7	Flat washer	1	36	push-pull spring/65Mn	1
8	Screw ST4 * 20	2	37	Switch	2
9	Protective plate fixing bracket	1	38	Fuel tank cap (with hole)	1
10	Brake spring pad	1	39	Fuel tank cap sealing ring	1
11	Screw ST3 * 8	4	40	Oil pot	1
12	Back cover	1	41	UL wire	1
13	Screw ST3 * 12	2	42	Screw ST4 * 12	5
14	Rotor	1	43	Support plate	1
15	Stator	1	44	Oil nozzle	1
16	Small gear	1	45	Chain wheel	1
17	Fuel inlet pipe	1	46	Guide plate screw	1
18	Oil pipe spring	1	47	10 inch chain	1
19	Oil pump component/13 teeth	1	48	10inch guide plate	1
20	Gearbox	1	49	Guide plate cover	1
21	Bearing 608	1	50	Push block	1
22	Shaft clamp spring with a diameter of 10	2	51	Screw ST4 * 8	3
23	Big gear	1	52	Cam	1
24	Semicircular key	1	53	Sprocket cover plate	1
25	Output shaft	1	54	Disc spring washer	1
26	Bearing 6000-2RS	1	55	Shaft clamp spring with a diameter of 8	1
27	Footboard	1	56	Adjustment knob (large)	1
28	Screw ST3 * 14	2	57	Compression knob	1
29	Switch pin	1			

ASSEMBLY DIAGRAM

