

PARTS LIST

No.	Description	Qty	No.	Description	Qty
1	Left foot plate	1	21	Lower bracket	1
2	Cross head self-tapping screw	1	22	Bushing	1
3	Micro switch	1	23	Gearbox	1
4	Spring	1	24	20V brushless controller for pruning machine	1
5	Main handle switch trigger	1	25	Micro switch	1
6	Pin (2-pin)	1	26	Brushless motor	1
7	Right casing	1	27	Motor end cover	1
8	Cross head self-tapping screw	15	28	Motor gear	1
9	Right foot plate	1	29	Fixed internal gear ring	1
10	Cross head self-tapping screw	4	30	First-layer planetary gear	5
11	Right trim panel	1	31	First-stage planet carrier	1
12	Blade assembly	1	32	Left decorative panel	1
13	Bottom shim	1	33	Left casing	1
14	Eccentric wheel gasket	2	34	Rotating frame spring	1
15	Blade spacer	1	35	Rotating bracket	1
16	Tableting	1	36	Front handle switch trigger	1
17	Cross head two-piece screw (with spring washer)	1	37	Front handle shell	1
18	End cap gasket	1	38	Protective shield	1
19	Internal gear ring	1	39	Knife sheath	1
20	Third-layer planetary gear	3			

ASSEMBLY DIAGRAM

