

PARTS LIST

No.	Description	Qty
1	3/8" ratchet handle set	1
2	Nut	1
3	Internal gear	1
4	LB-Transmission disc	1
5	LB-Planetary gear	3
6	Planetary gear spacer	1
7	LB-aluminum alloy front shell	1
8	LB-motor gear	1
9	Bearing	2
10	LB-Brushless motor rotor	1
11	LB-Brushless motor stator	1
12	LB-Rear bracket of motor	1
13	Cross self-tapping screw	4
14	φ7 single flat square pin	1
15	LB-Left and Right Casing	1
16	Large flat head chamfered hexagon socket screw	2
17	Torx self-tapping screw	4
18	LB-8812 lock button spring plate	2
19	Brushless switch	1
20	LB-Ratchet Wrench Control Panel	1
21	806 (switch) pin	1
22	EVA cotton	1
23	LB-switch lock button	1
24	LB-switch trigger	1
25	Rubber column	2

ASSEMBLY DIAGRAM

