


## PARTS LIST

| No. | Description                                    | Qty |
|-----|------------------------------------------------|-----|
| 1   | Cross-head pan head self-tapping screw         | 6   |
| 2   | Hex wrench                                     | 1   |
| 3   | Shell                                          | 1   |
| 4   | Switch push button                             | 1   |
| 5   | Brushless switch                               | 1   |
| 6   | Lampshade                                      | 1   |
| 7   | Pin                                            | 1   |
| 8   | Motor A183835-0801                             | 1   |
| 9   | Protective shield                              | 1   |
| 10  | Rotating fixed plate                           | 1   |
| 11  | Cross-head pan head self-tapping screw         | 4   |
| 12  | Inner pressure plate                           | 1   |
| 13  | Outer pressure plate                           | 1   |
| 14  | Flange internal and external hex machine screw | 1   |

### ASSEMBLY DIAGRAM

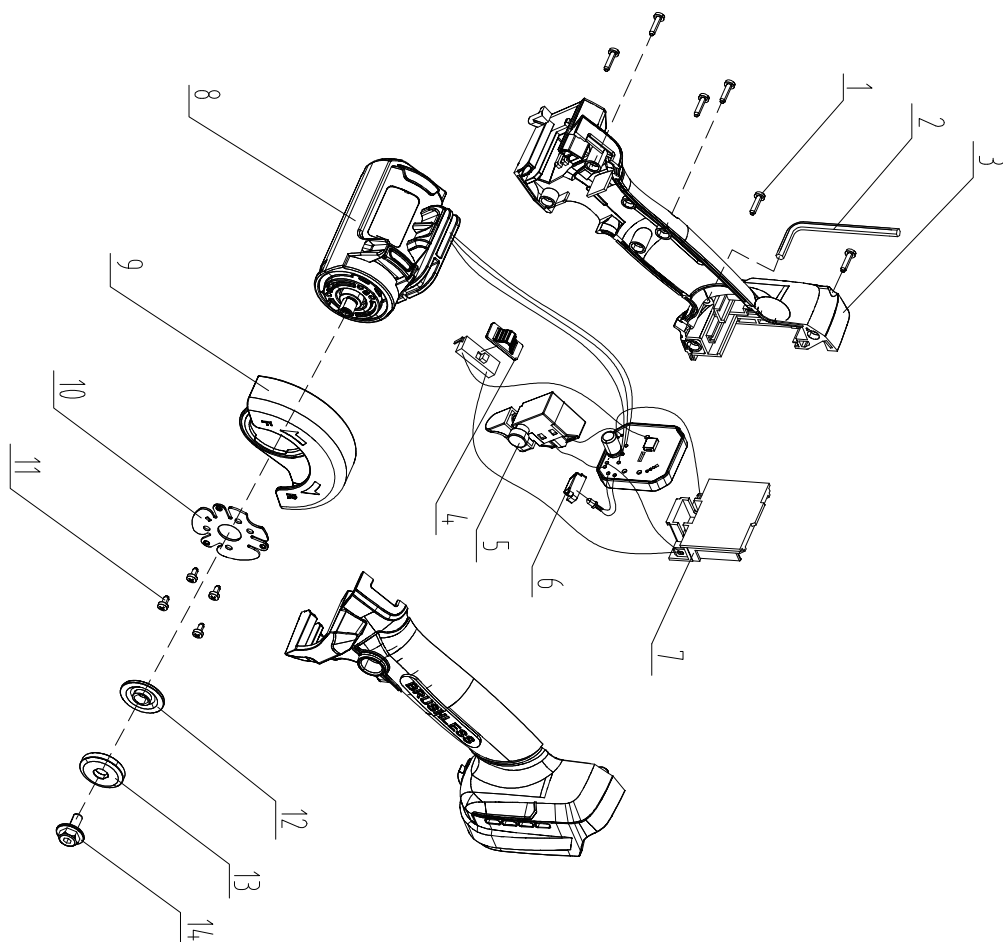

## PARTS LIST

| No. | Description                            | Qty |
|-----|----------------------------------------|-----|
| 1   | Side cover                             | 1   |
| 2   | Spring                                 | 1   |
| 3   | Hexagon nut                            | 1   |
| 4   | Push button                            | 1   |
| 5   | Shield                                 | 1   |
| 6   | Hexagon head machine screw             | 1   |
| 7   | Knob                                   | 1   |
| 8   | Cross-slot pan head self-tapping screw | 2   |
| 9   | Cover plate                            | 1   |
| 10  | Cross-head pan head self-tapping screw | 2   |
| 11  | Baseplate                              | 1   |
| 12  | Cylindrical pin                        | 1   |

### PARTS LIST

