

PARTS LIST

No.	Description	Qty	No.	Description	Qty
1	Press the lever	1	23	Bearings 608-2RS	1
2	Press the wrench down	1	24	O-ring 21.5 * 1.8	1
3	Grinding wheel cover	1	25	Bearing cover	1
4	Pan head screw M4×16	4	26	Screw M4 * 12	2
5	Output shaft	1	27	Rotor	1
6	Dust cover	1	28	Bearings 607-2RS	1
7	Front cover	1	29	Stator	1
8	O-ring ϕ 43×1.8	1	30	Right chassis	1
9	Deep groove ball bearing 6201-2RS	1	31	Screw ST3 * 14 F	7
10	Hole elastic retainer ring 32	1	32	Dust cover	2
11	Large gear 33T	1	33	Motor housing(Left)	1
12	Needle roller bearing HK0810	1	34	Pushing block	1
13	Self-locking pin	1	35	Switch rod	1
14	O-ring ϕ 4×1	1	36	Switch lever	1
15	Cross recessed pan head tapping screw ST4×22F	4	37	Rubber column	2
16	Self-locking spring	1	38	Positioning pin	1
17	Self-locking cap	1	39	Switch	1
18	Head	1	40	Lampshade	1
19	Nut M6	1	41	Control board	1
20	Wool rope	1	42	Machine pin holder	1
21	Small gear 12T	1	43	Wrench	1
22	Gasket 6.2×18.9×0.3	1			

ASSEMBLY DIAGRAM

