

PARTS LIST

No.	Description	Qty	No.	Description	Qty
1	Case	1	20	Spring	1
2	Switch pin	1	21	Self-locking button	1
3	Controller	1	22	Needle roller bearing	1
4	Switch	1	23	Angle grinder gear	1
5	Switch push button	1	24	Circlip for holes	1
6	Switch lever	1	25	Bearing	1
7	Spring	1	26	Aluminum head shell front cover	1
8	Speed control button	1	27	Dust cover	1
9	Stator	1	28	Output shaft	1
10	Windshield ring	1	29	Grinding wheel cover	1
11	Bearing	1	30	Pressure plate	1
12	Rotor	1	31	Upper pressure plate	1
13	Bearing	1	32	Cross head self-tapping screw	6
14	Angle grinder gear	1	33	Cross head self-tapping screw	4
15	Nut M6	1	34	Side handle	1
16	Bearing pressure plate	1	35	Cross head machine screw with flat washer and spring	4
17	Aluminum head shell	1	36	Dust-proof net	1
18	Cross countersunk head machine screw	2	37	Bearing bushing	1
19	Self-locking pin	1			

ASSEMBLY DIAGRAM

