

 
TOLSEN X20

96142/96542 LI-ION CORDLESS DUAL-PURPOSE FENCE SHEARS

INSTRUCTION MANUAL

20V LITHIUM-ION

CE RoHS

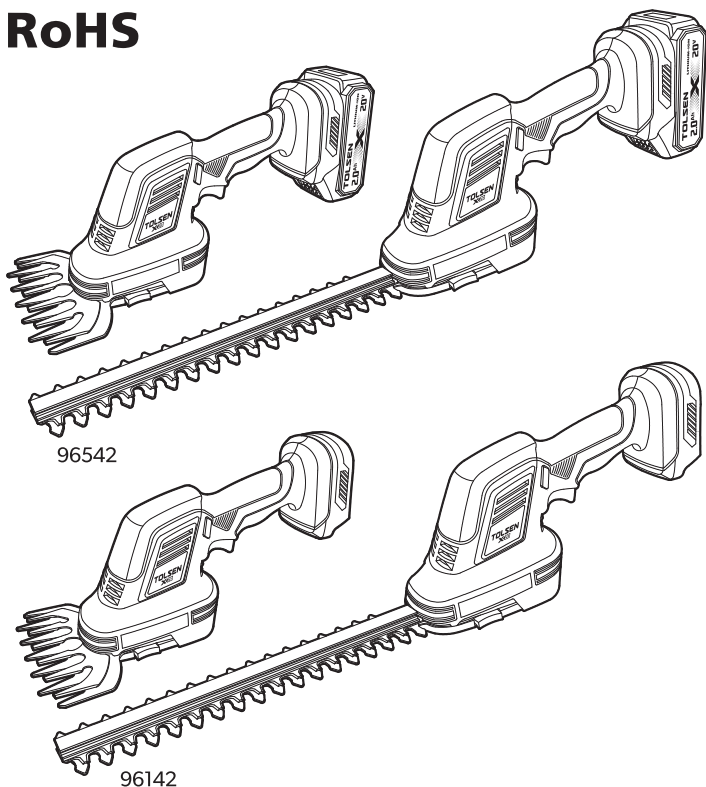

SAVE THIS MANUAL !

You will need this manual for safety instructions, operating procedures and warranty.
Put it and the original sales receipt in a safe dry place for future reference.

IMPORTANT SAFETY INFORMATION

General Power Tool Safety Warnings

WARNING Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

WARNING: This appliance is not intended for use by persons (including children) with reduced, physical or mental capabilities or lack of experience or knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children must be supervised to ensure that they do not play with the appliance.

Save all warnings and instructions for future reference

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

Work area safety

1. Keep work area clean and well lit. Cluttered or dark areas invite accidents.
2. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
3. Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical safety

1. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
2. Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.
There is an increased risk of electric shock if your body is earthed or grounded.
3. Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
4. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool.
Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
5. When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
6. If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) or ground fault circuit interrupter (GFCI) protected supply. Use of an RCD or GFCI reduces the risk of electric shock.
7. Power tools can produce electromagnetic fields [EMF] that are not harmful to the user. However, users of pacemakers and other similar medical devices should contact the maker of their device and/or doctor for advice before operating this power tool.

Personal safety

1. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
2. Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
3. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.
4. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
5. Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations
6. Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
7. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.
8. Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

Power tool use and care

1. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
2. Do not use the power tool if the switch could not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
3. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
4. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
5. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
6. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
7. Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.
8. Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

Battery Tool Use and Care

1. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
2. Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
3. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
4. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
5. Do not use a battery pack or tool that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
6. Do not expose a battery pack or tool to fire or excessive temperature. Exposure to fire or temperature above 130 °C may cause explosion.
7. Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions. Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

Service

1. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.
2. Never service damaged battery packs. Service of battery packs should only be performed by the manufacturer or authorized service providers.
3. Follow instruction for lubricating and changing accessories.

Hedge trimmer safety warnings

1. Use both hands when operating the hedge trimmer. Using one hand could cause loss of control and result in serious personal injury.
2. Keep all parts of the body away from the cutter blade. Do not remove cut material or hold material to be cut when blades are moving. Blades coast after turn off. Make sure the switch is off when clearing jammed material. A moment of inattention while operating the hedge trimmer may result in serious personal injury.
3. Carry the hedge trimmer by the handle with the cutter blade stopped. When transporting or storing the hedge trimmer always fit the cutting device cover. Proper handling of the hedge trimmer will reduce possible personal injury from the cutter blades.
4. Hold the power tool by insulated gripping surfaces only, because the cutter blade may contact hidden wiring. Cutter blades contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
5. **DANGER** – Keep hands away from blade. Contact with blade will result in serious personal injury.
6. Keep cable away from cutting area. During operation the cable may be hidden in shrubs and can be accidentally cut by the blade.
7. Always store idle power tools indoors. When not in use, power tools should be stored indoors in a dry place, out of reach of children.

Battery Safety



WARNING

This battery can only be used in the machines included in the TOLSEN X20V lithium-ion power platform system. This battery can only be used cooperatively with the designated battery charger.

Li-Ion batteries, if incorrectly used, stored or charged will cause a fire, burn and explosion hazard.

Failure to follow these instructions may cause overheating or fire.

1. Keep the battery out of reach of children.
2. The battery should be charged at ambient temperatures between 5 and 40°C (ideally around 20°C) . After charging, allow 15 minutes for the battery to cool before use.
3. The Battery Charger monitors battery temperature and voltage while charging. DO NOT leave batteries on charge for extended periods and NEVER store batteries on charge. Ensure that the charger is disconnected from the mains supply after use.
4. When not in use batteries should be stored at room temperature. Do not store the tool and battery cartridge in locations where the temperature may reach or exceed 40°C (ideally around 20°C).
5. Ensure that battery contacts cannot accidentally short in storage. Keep batteries clean; foreign objects or dirt may cause a short. Keep away from other metal objects, for example, paperclips, coins, keys, nails and screws.
6. **DO NOT** store lithium-ion battery packs in a discharged state over a long period as this can damage the lithium-ion cells. For long-term storage, store batteries in a high charge state disconnected from the power tool.
7. Batteries can become faulty over time, individual cells in the battery can fail and the battery could short. The charger will not charge faulty batteries. Use another battery, if possible, to check correct functionality of the charger and purchase a replacement battery if a faulty battery is indicated.
8. **DO NOT** open, disassemble, crush, heat or incinerate. Do not dispose of in fire or similar.

Battery Charger Safety



WARNING

This charger can only be used to charge the batteries which has TOLSEN X20V symbol. If it is used to charge other kinds of batteries, there is a risk of explosion. **DO NOT** attempt to recharge non-rechargeable batteries.

1. This is class 2 power supply. It is suitable for indoor use only.
2. Before use, the input and output technical data must be checked to secure correct use.
3. Do not use the Battery Charger in the circumstances that the output polarity does not match the load polarity.
4. Do not attempt to use the charger with any batteries other than those supplied. Keep your battery charger clean; foreign objects or dirt may cause a short or block air vents. Failure to follow these instructions may cause overheating or fire
5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Save these instructions



WARNING

DO NOT let comfort or familiarity with product (gained from repeated use) replace strict adherence to safety rules for the subject product. MISUSE or failure to follow the safety rules stated in this instruction manual may cause serious personal injury.

Before Use

Removing a battery

Remove the Battery from the tool by pressing the lock button, then slide the Battery out of the Battery Slot.

WARNING:

DO NOT try to remove the Battery without pressing the lock button. The tool or Battery could be damaged.

Fitting a battery

1. Fit a battery by sliding it on to the Battery Slot of the tool until it clicks and locks into position

 
 
Note: Make sure the Battery and tool are lined up correctly. If the Battery does not slide into the tool easily, do not force it. Instead, slide the Battery out of the tool again, check the top of Battery and the tool battery slot are clean and undamaged and that the contacts are not bent

Setting up the battery charger

1. If there is battery fitted, remove any battery from battery charger first

2. Insert the Battery Charger mains plug into a suitable mains socket

Note: The Green LED on the Charger will always bright to indicate that the charger is ready to charge the battery.

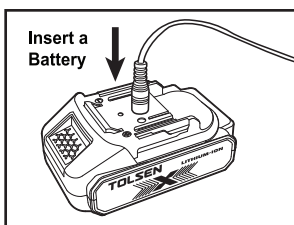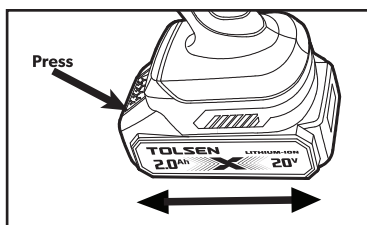

WARNING: Use this charger **ONLY** to charge the supplied battery or additional purchased batteries that are specifically designed for this tool.

Charging the battery

WARNING: Failure to follow the correct procedure when charging batteries will result in permanent damage.

Note: Normal charging time is approximately 65 minutes for a recently discharged 2.0Ah capacity battery.

However, if the Battery has been left in a discharged state for some time, it may take additional time to charge.

1. Slide a fully or partially discharged Battery on to the Battery Charger .

2. Once charging commences, the Red LED will on.

3. When the Battery is fully charged, the Red LED will off and Green LED will on.

IMPORTANT: When a low charge level is indicated, the tool may stop operating while in use, which is dangerous when operating it. Always ensure the battery pack has a good charge level.

Note: Symbology


	Class II Double insulated for additional protection
	CE conformity
	Read the instruction manual before using
 	Wear hearing protection while operating the tool Wear hand protection
 	Always use breathing apparatus when machining materials which generate dust. Wear ear protection.
	Operating environmental temperature
	Do not incinerate battery pack
	Do not expose to water
	Keep all bystanders at least 50 feet away.
	Thrown objects can ricochet and result in personal injury or property damage. Wear protective clothing and boots.
	Danger - keep hands and feet away from blade.v
	Do not expose the product to rain or moist conditions.
	Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.
	Batteries and rechargeable batteries are not household waste! As a consumer, you are required by law to dispose of all batteries and accumulators, whether or not they contain harmful substances *, at a collection point in your municipality / neighborhood or in commerce so that they can be disposed of in an environmentally sound manner.
	Battery pack is recyclable and should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice
	Safety alert
	If the current of the charger is higher than "x"A, the time-lag fuse will interrupt the power suppl

SPECIFICATIONS

Rated Voltage	20VDC
No-load Speed	n_0 : 400min ⁻¹
Hedge Trimming Mode	Cutting Diameter: 8 mm /Cutting Length: 300 mm
Grass Trimming Mode	Cutting Diameter: 8 mm /Cutting Width: 150 mm
Battery (96142 not include)	
Battery Voltage	20VDC
Battery capacity	2.0Ah
Charger (96142 not include)	
Input Voltage	100-240VAC 50/60Hz
Output Voltage	21.5VDC
Rated output current	1.5A
Charging Time	85 minutes fast charging(2.0Ah battery)
Protection class	



 FUNCTIONS

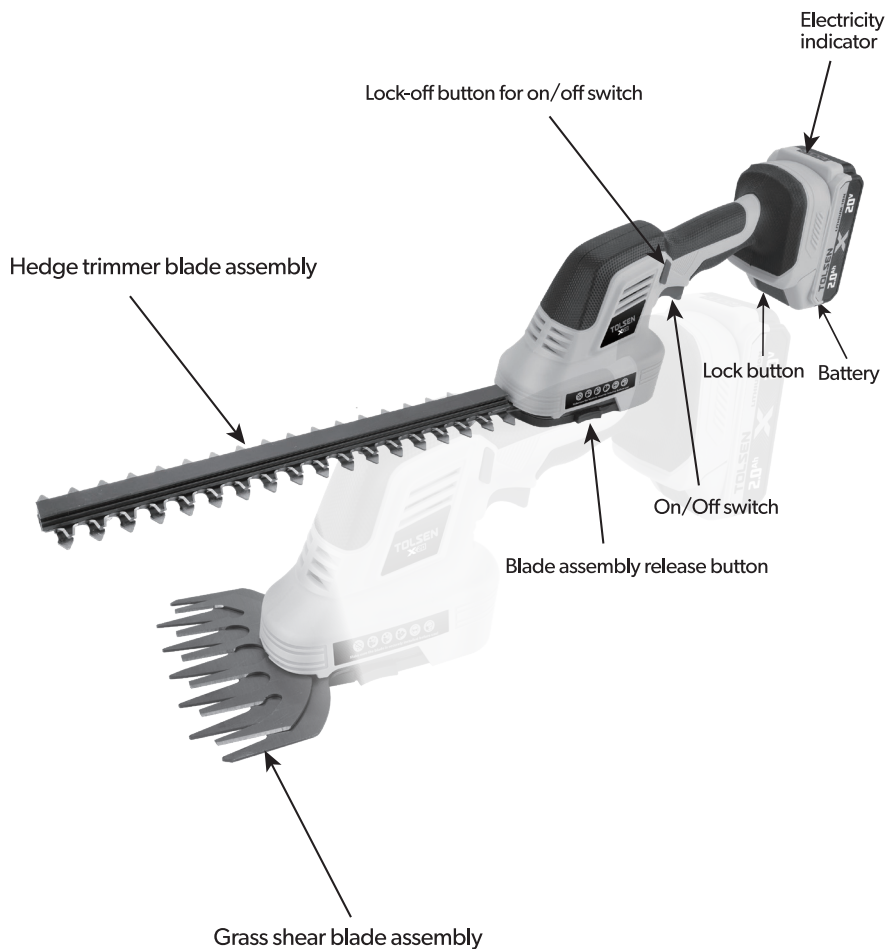

ASSEMBLY



WARNING

For your personal safety, do not insert battery before the tool is assembled completely.

 
Install The Blade Assembly

Locate the end of blade assembly under the retaining rib in the rear corner of the housing, press down the whole blade assembly until aligning the holes in the blade onto the pins.



Remove The Blade Assembly

1. Press the blade assembly release button.
2. Lift the blade assembly away from the housing.

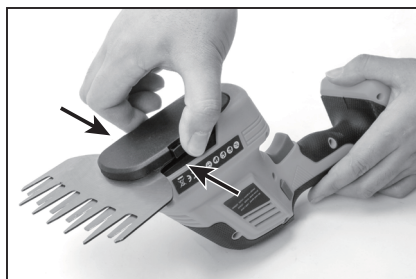

OPERATION



WARNING

Do not allow familiarity with this product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.

Start The Machine

Press the lock-off button and hold while actuating the on/off switch.



Stop The Machine

Release the lock-off button and the power switch to stop the machine.



CUT GRASS

Hold the device horizontally to the ground. The blade should touch the grass. Results are best when the lawn is dry. Unlock the safety switch, and then depress the ON/OFF switch to cut the grass



NOTE

To avoid serious personal injury, always turn off the machine before cleaning when the machine was jammed. use a soft brush to remove debris from intakes and cutting blade. Then restart the machine.

Trim Hedges

The device may be used to trim small hedges and shrubs. Hold the device in a slight angle to the hedge. First, trim the lateral areas from the lower to the upper edges, and then trim the upper edge



MAINTENANCE



WARNING

Switch off before adjusting or cleaning. The blade continues to move for a few seconds after the device is switched off.



WARNING

Do not touch the moving blades.

NOTE: To ensure long and reliable service, carry out the following maintenance regularly.

- Regularly check for obvious defects such as loose fixings, and worn or damaged components.
- Ensure that the guard and protective devices are undamaged and properly mounted. Before using, carry out any necessary maintenance or repairs.
- If the garden product should happen to fail, repairs should always be carried out by an authorized customer service agent for garden products.

Blade Maintenance

- Always clean and lubricate the blades after use.
- During longer cutting jobs, we recommend periodically lubricating the cutting blade.
- Visually check the condition of the blade cutting edges.
- Ensure that the cutting blade is stored with the blade guard supplied when not in use.

Start The Machine



WARNING

Always wear protective gloves when using, adjusting or cleaning the garden product.



WARNING

Do not change the blade without blade covers.

1. Press the blade assembly release button.
2. Lift the blade assembly away from the housing.

Store The Machine



WARNING

Switch off before adjusting or cleaning. The blades continue to move for a few seconds after the garden product is switched off.



WARNING

Do not touch the moving blades.



WARNING

Always wear protective gloves when using, adjusting or cleaning the garden product.

- Clean the exterior of the device thoroughly using a soft brush and cloth. Do not use water, solvents or polishes. Remove all debris.
- Carry the device by the handle with the cutter blade stopped. When transporting or storing the hedge trimmer blade always fit the cutting device cover.
- Store the device in a secure, dry place out of the reach of children. Do not place other objects on top of the device.

TROUBLESHOOTING

problem	possible causes	Likely Solutions
Tool will not start.	1. Battery Pack not properly connected. 2. Battery Pack not properly charged. 3. Battery Pack worn out. 4. Internal damage or wear. (Carbon brushes or Trigger, for example.) 5. Contact chips of switch or battery pack deformed. 6. Battery is not suitable for TOLSEN X20V lithium-ion power platform system 7. Overload operation. 8. PCB damages. 9. Motor damages.	1. Remove Battery Pack, make sure there are no obstructions, clean battery contacts on tool, reinsert the Battery Pack according to its shape (it should only fit one way), and press firmly until the Battery Pack locks in place. 2. Make sure Charger is connected and operating properly. Give enough time for Battery Pack to recharge properly. 3. Dispose of old Battery Pack properly or recycle. Replace Battery Pack. 4. Have technician service tool. 5. Replace switch or Battery Pack 6. Replace the battery of TOLSEN X20V 7. Stop to use and restart the machine after cooling. 8. Replace damaged PCB. 9. Replace damaged motor."
Tool operates slowly.	1. Battery Pack wearing out. 2. Low battery 3. Blocked motor housing vents.	1. Dispose of old Battery Pack properly or recycle. Replace Battery Pack. 2. Recharge or replace a fully charged battery 3. Clean the Blocked motor housing vents
Smoke coming out of the tool.	1. The tool damages.	1. Stop to use the tools and remove the battery pack. Please contact service center.
Motor can work, but the blade doesn't work	1. The tools damages. 2. The blade is stuck.	1. Don't use the tools and contact service center. 2. Remove the battery pack and clean the blade.
Excessive noise / shake or rattling.	1. The spare parts are loose. 2. The spare parts damages.	1. Stop to use the tools and remove the battery pack. Check the problems and tighten loose spare parts. 2. If the tools still cannot use, please contact service center.
Overheating.	Forcing tool to work too fast.	Allow tool to work at its own rate.
Motor runs, but cutting blades do not move.	Hedger damaged. Do not use garden shear.	Call for technical service.
Motor hums, blades do not move.	Debris may be jamming the blades.	Switch off, clear debris blockage from blades.

CE DECLARATION OF CONFORMITY

WE
SUZHOU TOLSEN TOOLS CO.,LTD.
198 HUASHAN ROAD, ZHANGJIAGANG,
JIANGSU, CHINA

Declare that the product
96142/96542
LI-ION CORDLESS DUAL-PURPOSE
FENCE SHEARS

Complies with the essential health and safety requirements of the following Directices:
council directive 2006/42/EC

Standards and technical specifications referred to:


EN 62841-1:2015+A11:2022+A1:2025
EN IEC 55014-1:2021
EN IEC 55014-2:2021
EN IEC 61000-3-2:2019+A2:2024
EN 61000-3-3:2013+A1:2019+A2:2021

Authorised Signatory and technical file holder

Signed for and on behalf of:
SUZHOU TOLSEN TOOLS CO.,LTD.
198 HUASHAN ROAD, ZHANGJIAGANG,
JIANGSU, CHINA

 WANG QING
Group Quality Director
on:07/02/2025



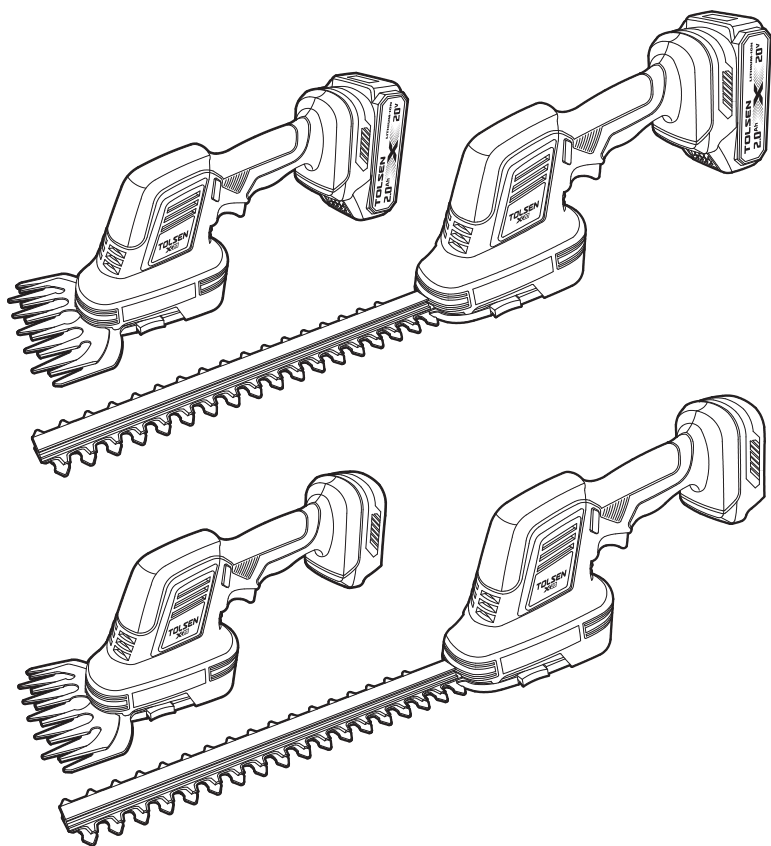

SUZHOU TOLSEN TOOLS CO.,LTD.

www.tolsentools.com

TOLSEN is a trademark or
registered trademark of TOLSEN
TOOLS. All rights reserved.
MADE IN CHINA



SCAN TO VISIT
PRODUCT LINK
96142



SCAN TO VISIT
PRODUCT LINK
96542