

PARTS LIST

NO.	Part Description
1	Front cover
2	Insulation ring
3	Nozzle
4	Sealing ring
5	Heat pipe
6	Blocking unit
7	Circlip
8	Connection sleeve
9	Fastening spring
10	Rubber ring
11	Bracket
12	Lock hook
13	Link
14	Screw
15	Fixing plate
16	Dial
17	Trigger
18	Extension spring
19	Housing Assembly
20	Plug-in seat
21	PTC
22	EATON
23	Leading wire
24	On-off switch
25	Housing Assembly
26	Screw

ASSEMBLY DIAGRAM

