

PARTS LIST

Part	Description	Qty	Part	Description	Qty
1	Collet 1/2"	1	36	Speeder	1
2	Screw/st5x22	4	37	Label	1
3	Round Nut/ Φ 14x19	1	38	Scale Label	1
4	Compression Spring/ Φ 14x Φ 1.2x18	2	39	Housing	1
5	Screw/st4x16	12	40	Bear Cover	1
6	Left Handle Cover	1	41	Label	1
7	Screw/m5x18	4	42	Brush Holder	1
8	Right Handle Seat	1	43	Carbon Brush	1
9	Head Housing	1	44	Cap Of Brush Holder	1
10	Right Handle Seat	1	45	Axis Screw	1
11	Right Handle Cover	1	46	Height Block	1
12	Switch	1	47	Dust bag connector	1
13	Strain Relief	1	48	Butterfly Screw/m5x10	1
14	Cord Guard	1	49	Screw/m5x10	4
15	Cord	1	50	Fine Tuning Cap/m10x Φ 16x12	1
16	Cap Of Lock	1	51	Fine Tuning Knob	1
17	Circlip/ Φ 12	1	52	Guide Pin Spring (Long)	1
18	Lock Pin	1	53	Long Guide Pillar	1
19	Compression Spring/ Φ 8x Φ 0.8x16	4	54	Guide Pin Spring (Short)	1
20	Screw/m5x10	3	55	Butterfly Screw/m5x16	4
21	Lock Wrench	1	56	Short Guide Pillar	1
22	Lock Screw	1	57	Seat	1
23	Compression Spring	1	58	Elastic Cylinder Pin	2
24	Bearing 6004 2rs	1	59	Base	1
25	Bearing Cover	1	60	Parallel Guide/ Φ 12x200	2
26	Screw/m4x10	2	61	Parallel Locating Seat	1
27	Armature	1	62	Adjust Screw/m10x40	1
28	Bearing 6200 2rs	1	63	Trim Guide	1
29	Wave Pad/ Φ 29	1	64	Guide Bracket	1
30	Wind Circle	1	65	Parallel Guide	1
31	Stator	1	66	Butterfly Screw/m6x10	2
32	Adjust Screw/m10x80	1	67	Sample Gauge Guide	1
33	Screw/st5x70-c	2	68	Collet Bushing /1/4"	1
34	Baffle	1	69	Collet Bushing /3/8"	1
35	Speeder Cover	1	70	Wrench/24	1

ASSEMBLY DIAGRAM

