

PARTS LIST

Part	Description	Qty	Part	Description	Qty
1	Up press plate	1	28	Wind shield	1
2	Down press plate	1	29	Screw ST5x60A	2
3	Output shaft	1	30	Stator	1
4	Dust cap $\Phi 20.7$	1	31	Motor house	1
5	Screw M5*18	4	32	Screw BT4x12	2
6	Front cover	1	33	Brush carrier cover	2
7	Bearing 6203	1	34	Carbon brush	2
8	6203 Bearing gland	1	35	Screw ST4x10	2
9	Screw M5*10	3	36	Spring	2
10	Aquare key 4*4*13.5	1	37	Brush carrier	2
11	Big gear 47T	1	38	Soft start (optional)	1
12	Jump ring $\Phi 15$	1	39	Cable	1
13	Bearing 608	1	40	Jacket	1
14	Small gear	1	41	Screw ST4*14A	2
15	Nut M8	1	42	Press plate	1
16	Self-lock pin	1	43	Switch	1
17	Gear box	1	44	Capacitance (optional)	1
18	Spring	1	45	Left handle	1
19	Self-lock cap	1	46	Spin button	1
20	Screw BT5*40	4	47	Spin button spring	1
21	Bearing 6201	1	48	Right handle	1
22	6201 Bearing gland	1	49	Screw BT4x20	2
23	Screw M5*10	3	50	Screw BT4x16	4
24	Rotor	1	51	Wheel guard	1
25	Insulating strip	1	52	Wrench	1
26	Bearing 629	1	53	Auxiliary handle	1
27	Bearing jacket	1			

ASSEMBLY DIAGRAM

