



ASSEMBLY DIAGRAM & PARTS LIST

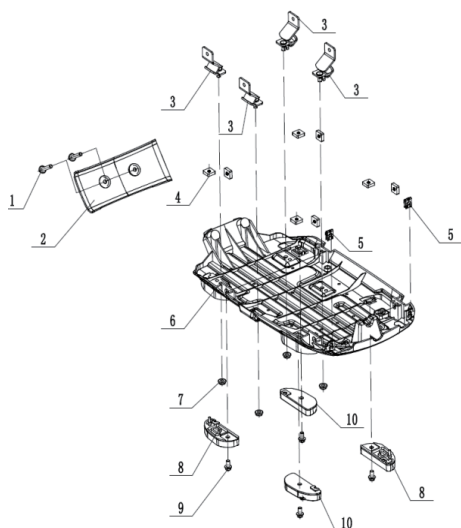

A-Baseplate parts


NO.	Description	Qty
1	Threaded bolt	2
2	Decorative plate	1
3	Left damping pad combination	4
4	Square nut	8
5	Clip nut	2
6	Baseplate combination	1
7	Hexagon flange nut	4
8	Frame shock absorber assembly	2
9	Hexagon flange nut	4
10	Frame shock absorber assembly	2

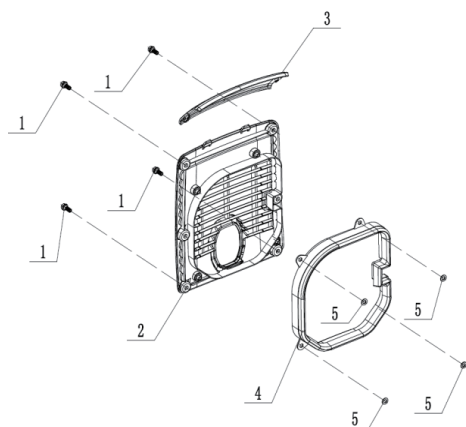

B-Muffler cover parts


NO.	Description	Qty
1	Hexagon step bolts	4
2	Muffler cover	1
3	Decorative plate	1
4	Muffler guide cover	1
5	Bearing clamp ring	4

ASSEMBLY DIAGRAM & PARTS LIST

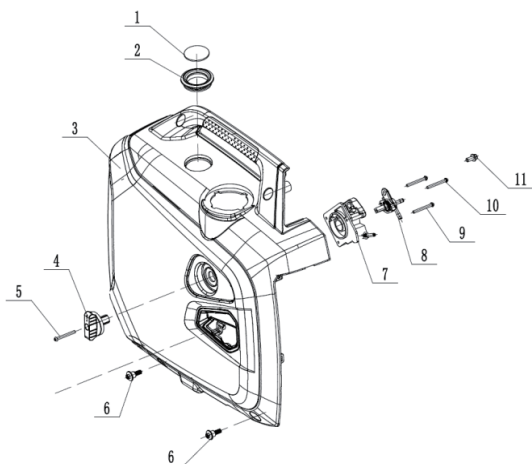

C-Left cover assembly components


NO.	Description	Qty
1	Oil guage window	1
2	Rubber pad	1
3	Left cover assembly	1
4	Knob combination	1
5	Cross slot disc head screws	1
6	Hexagon step bolts	2
7	Start Switch Combination	1
8	Oil Switch Combination	1
9	Cross disc head self-tapping screws	2
10	Cross disc head self-tapping screws	1
11	Hexagon flange bolts	1

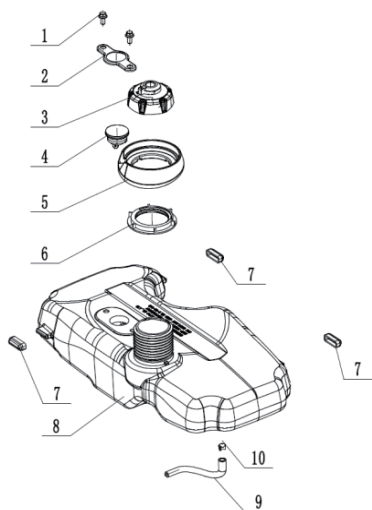

D-Fuel tank


NO.	Description	Qty
1	Hexagon flange bolts	2
2	Oil guage cover	1
3	Fuel Tank Cover Combination	1
4	Oil guage Combination	1
5	Glue sleeve for oil injection	1
6	Retainer nut	1
7	Support rubber sleeve	3
8	Fuel tank combination	1
9	Oil pipe	1
10	Clamping band	1

ASSEMBLY DIAGRAM & PARTS LIST

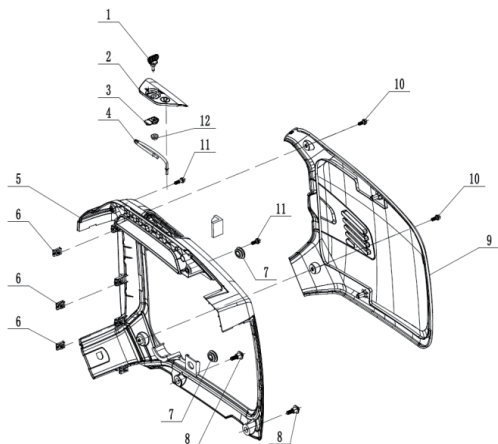

E-Right cover assembly components

NO.	Description	Qty
1	Knob combination	1
2	Maintenance door	1
3	Block combination	1
4	Rubber rope	1
5	Right cover assembly	1
6	Clip nut	3
7	Fasten rubber sleeve	2
8	Hexagon step bolts	2
9	Right cover	1
10	Hexagon step bolts	2
11	Hexagon step bolts	2
12	Nylon hexagon lock nut	1

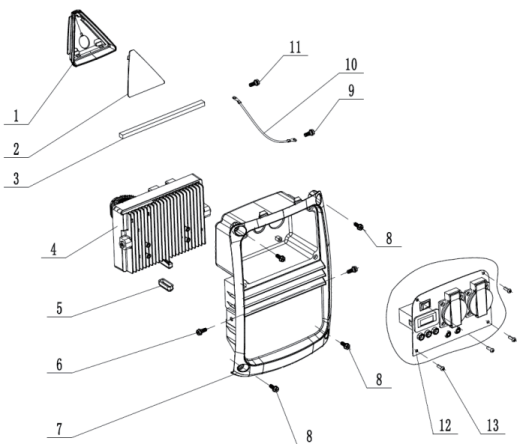

F-Control panel components

NO.	Description	Qty
1	Decorative board seats	1
2	Decorative plate	1
3	Muffler cotton	1
4	Inverter components	1
5	Fuel tank support rubber sleeve	1
6	Cross slot disc head screws	2
7	Panel seat combination	1
8	Hexagon step bolts	4
9	Hexagon flange bolts	1
10	Connecting line	1
11	Hexagon flange bolts	1
12	Control panel combination	1
13	Cross slot disc head screws	4