

### PARTS LIST

| No. | Description               | Qty | No. | Description         | Qty |
|-----|---------------------------|-----|-----|---------------------|-----|
| 1   | Rubber Foot               | 4   | 44  | Cap of Brush Holder | 2   |
| 2   | Hexagon Nut(C             | 1   | 45  | Carbon Brush        | 2   |
| 3   | Base                      | 1   | 46  | Brush Holder        | 2   |
| 4   | Hexagon Nut               | 1   | 47  | Plastic Housing     | 1   |
| 5   | Big Washer (A             | 1   | 48  | Locking Pin         | 1   |
| 6   | Small Clamping Plate      | 1   | 49  | Spring of Lock Pin  | 1   |
| 7   | Screw                     | 1   | 50  | Wool Felt           | 1   |
| 8   | Hatch Pin                 | 1   | 52  | Bearing             | 1   |
| 9   | Vice Stand                | 1   | 51  | Bearing             | 1   |
| 10  | Column Pin                | 1   | 53  | Cable Wire          | 1   |
| 11  | Speed Nut                 | 1   | 54  | Stator              | 1   |
| 12  | Flat Washer (C            | 1   | 55  | Cross Screw         | 2   |
| 12  | Flat Washer (C            | 4   | 56  | Anti-wind Ring      | 1   |
| 13  | Standard Spring Washer    | 2   | 57  | Rotor               | 1   |
| 14  | Hexagon Bolt              | 2   | 58  | Bearing             | 1   |
| 15  | Column Pin                | 1   | 59  | Cross Screw         | 2   |
| 16  | Scale Plate               | 1   | 60  | Cross Screw         | 1   |
| 17  | Flat Washer (C            | 2   | 61  | Gear Pad            | 1   |
| 18  | Standard Spring Washer    | 2   | 62  | Aluminum Housing    | 1   |
| 19  | Hexagon Bolt              | 2   | 63  | Protective Cover    | 1   |
| 20  | Hexagon Bolt              | 1   | 64  | Cross Screw         | 4   |
| 21  | Cap of Height Limited Pin | 1   | 65  | Active Cover        | 1   |
| 22  | Type "O" Ring             | 1   | 66  | Screw               | 2   |
| 23  | Height Limited Pin        | 1   | 67  | Spring Washer       | 1   |
| 24  | Limited Bushing           | 1   | 68  | Gear                | 1   |
| 25  | Adjusting Stand           | 1   | 69  | Bearing Holder      | 1   |
| 26  | Hexagon Nut               | 1   | 70  | Bearing             | 1   |
| 27  | Hexagon Screw             | 1   | 71  | Flat Washer (A      | 1   |
| 28  | Support Bracket           | 1   | 72  | Spindle             | 1   |
| 29  | Cross Screw               | 2   | 73  | Lock Catch          | 3   |
| 30  | Standard Spring Washer    | 2   | 74  | Lock Pin            | 3   |
| 30  | Standard Spring Washer    | 9   | 75  | Clamp               | 2   |
| 31  | Flat Washer (C            | 2   | 76  | Cutting Wheel       | 1   |
| 31  | Flat Washer (C            | 7   | 77  | Cord Armor          | 1   |
| 32  | Hexagon Nut               | 1   | 78  | Small Clamp         | 1   |
| 33  | Dust Board                | 1   | 79  | Hexagon Bolt        | 1   |
| 34  | Flat Washer (C            | 4   | 80  | Hexagon Nut(C       | 3   |
| 34  | Flat Washer (C            | 1   | 81  | Right Handle        | 1   |
| 35  | Standard Spring Washer    | 4   | 82  | Switch              | 1   |
| 35  | Standard Spring Washer    | 1   | 83  | Cord Anchorage      | 1   |
| 36  | Hexagon Screw             | 1   | 84  | Cross Screw         | 2   |
| 37  | Big Spring                | 1   | 85  | Left Handle         | 1   |
| 38  | Circumgyrate Pin          | 1   | 86  | Cross Screw         | 6   |
| 39  | Circumgyrate Pin Cover    | 1   | 87  | Cross Screw         | 5   |
| 40  | Cross Screw               | 2   | 88  | Hexagon Nut         | 2   |
| 41  | Cross Screw               | 2   | 89  | Protector           | 1   |
| 42  | Rear Cover                | 1   | 90  | Cross Screw         | 2   |
| 43  | Cross Screw               | 3   |     |                     |     |

### ASSEMBLY DIAGRAM

