

PARTS LIST AND DIAGRAM

Parts List

S.N.	Part	Qty	S.N.	Part	Qty
1	BASE	1	38	BIG FLAT WASHER	1
2	COLUMN FLANGE	1	39	SPRING WASHER	2
3	FLAT WASHER	2	40	CROSS RECESS PAN HD SCREW	2
4	SPRING WASHER	5	41	MICRO PRESSURE CLAW	1
5	OUTSIDE HEX. BOLT	3	42	NUT	1
6	OUTSIDE HEX. BOLT	1	43	HEX. SOC SET SCREW	2
7	SPRING WASHER	1	44	MOTOR PULLEY	1
8	WORKING TABLE	1	45	CIRCLIP FOR HOLE	2
9	TABLE SUPPORT	1	46	BEARING	2
10	ANGLE LABEL	1	47	KEYWAY SPINDLE	1
11	LOCKING HANDLE	1	48	SPINDLE PULLEY	1
12	COLUMN	1	49	BELT	1
13	HANDLE TIP	3	50	NUT	2
14	HANDLE	3	51	SPRING COVER	1
15	GEAR SHAFT	1	52	SPRING	1
16	WARNING LABEL	1	53	PLUG WITH CABLE	1
17	A WORD HEAD SCREW	1	54	CROSS RECESSED PAN HEAD SCREW	3
18	NUT	3	55	SWITCH	1
19	HOUSING	1	56	CROSS RECESSED PAN HEAD SCREW	1
20	HEX. SOC SET SCREW	2	57	GROUNDING PARTS	1
21	WING KNOB	1	58	TOOTH LOCK WASHER	1
22	MOTOR SPRING	1	59	CROSS RECESSED PAN HEAD SCREW	1
23	MOTOR PUSH ROB	1	60	CE CORD CLAMP	1
24	WASHER	1	61	LABEL	1
25	MOTOR	1	62	LABEL	1
26	OUTSIDE HEX. BOLT	2	63	INDICATOR	1
27	DAMPING WASHER	4	64	LIMITED BOLT	1
28	NUT	1	65	BEARING	2
29	PULLEY COVER	1	66	WASHER	1
30	PROTECTOR RING	1	67	SPINDLE SOCKET	1
31	CORD CLAMP	1	68	CHUCK GUARD	1
32	CROSS RECESS PAN HD SCREW	1	69	MAIN SPINDLE	1
33	FLAT WASHER	6	70	CHUCK	1
34	CROSS RECESS PAN HD SCREW	3			
35	HEXAGON BAR WRENCH	1			
36	HEXAGON BAR WRENCH	1			
37	MIRCO SWITCH	1			

Assembly Diagram

