



## ASSEMBLY DIAGRAM & PARTS LIST

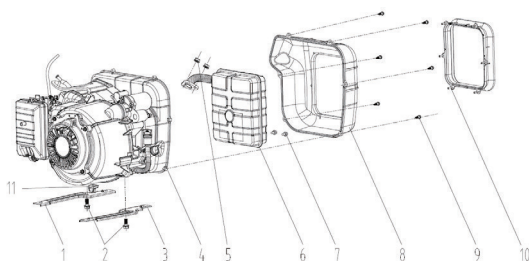


### A-ENGINE

| NO. | Description                                  | Qty |
|-----|----------------------------------------------|-----|
| 1   | Fixing holder,Engine                         | 1   |
| 2   | Hexagonal flange bolt                        | 2   |
| 3   | Fixing holder,Engine                         | 1   |
| 4   | Engine assy.                                 | 1   |
| 5   | Hexagonal nut                                | 2   |
| 6   | Muffler assy.                                | 1   |
| 7   | Hexagonal flange bolt                        | 2   |
| 8   | Muffler tail cover                           | 1   |
| 9   | Cross recessed pan head self threading screw | 6   |
| 10  | Air guide sleeve,Muffler                     | 1   |
| 11  | Baffle                                       | 1   |

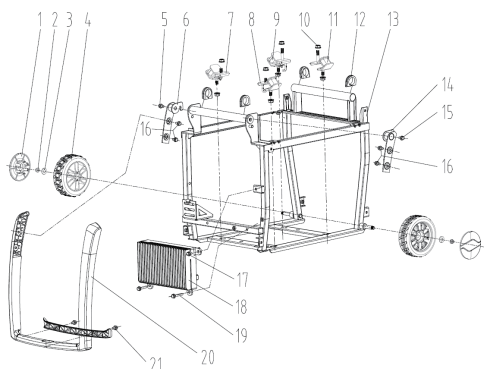


### B1-FRAME ASSY

| NO. | Description              | Qty |
|-----|--------------------------|-----|
| 1   | Ornament shell           | 2   |
| 2   | Steel Hexagonal lock nut | 2   |
| 3   | Gasket-grade C           | 2   |
| 4   | Wheel assy.              | 2   |
| 5   | Hexagonal step bolt      | 1   |
| 6   | Handle hose connector    | 1   |
| 7   | Left shock pad assy.     | 1   |
| 8   | Right shock pad assy.    | 1   |
| 9   | Left shock pad assy.     | 1   |
| 10  | Hexagonal flange nut     | 4   |
| 11  | Right shock pad assy.    | 1   |
| 12  | Ornament rubber sleeve   | 1   |
| 13  | Frame assy.              | 1   |
| 14  | Handle hose connector    | 1   |
| 15  | Hexagonal step bolt      | 2   |
| 16  | Hexagonal flange bolt    | 2   |
| 17  | Hexagonal flange bolt    | 1   |
| 18  | Inverter assy.           | 1   |
| 19  | Hexagonal flange bolt    | 2   |
| 20  | Handle pipe assy.        | 1   |
| 21  | Ornament shell           | 1   |

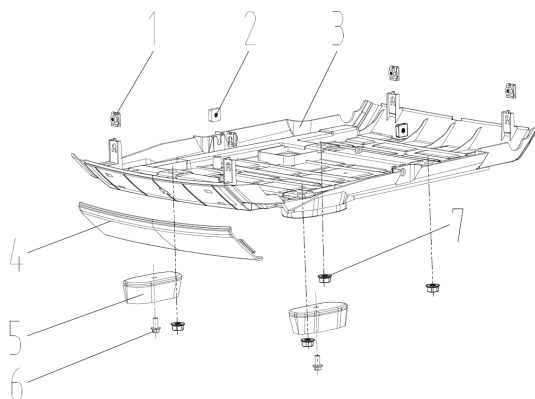


## B2-FRAME ASSY

| NO. | Description            | Qty |
|-----|------------------------|-----|
| 1   | Nut                    | 4   |
| 2   | Square nut             | 2   |
| 3   | Baseplate assy.        | 1   |
| 4   | Ornament shell         | 1   |
| 5   | Shock seat assy.,Frame | 2   |
| 6   | Hexagonal flange bolt  | 2   |
| 7   | Hexagonal flange nut   | 4   |

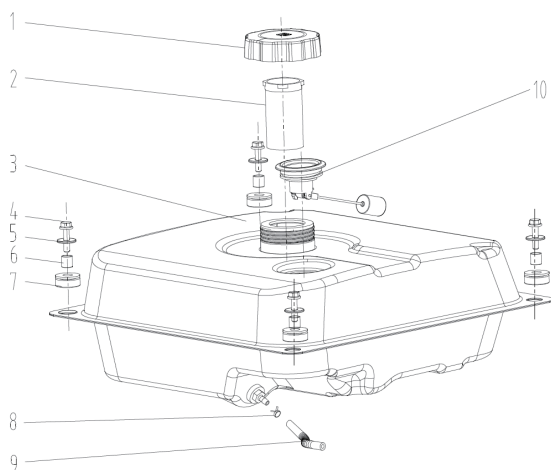


## C-OIL TANK ASSY

| NO. | Description               | Qty |
|-----|---------------------------|-----|
| 1   | Oil cap assy.             | 1   |
| 2   | Oil filter assy.          | 1   |
| 3   | Oil tank assy.            | 1   |
| 4   | Hexagonal flange bolt     | 4   |
| 5   | Gasket,Oil tank           | 4   |
| 6   | Bushing                   | 4   |
| 7   | Shock rubber pad,Oil tank | 4   |
| 8   | Clamp                     | 1   |
| 9   | Oil pipe                  | 1   |
| 10  | Oil leveler assy.         | 1   |

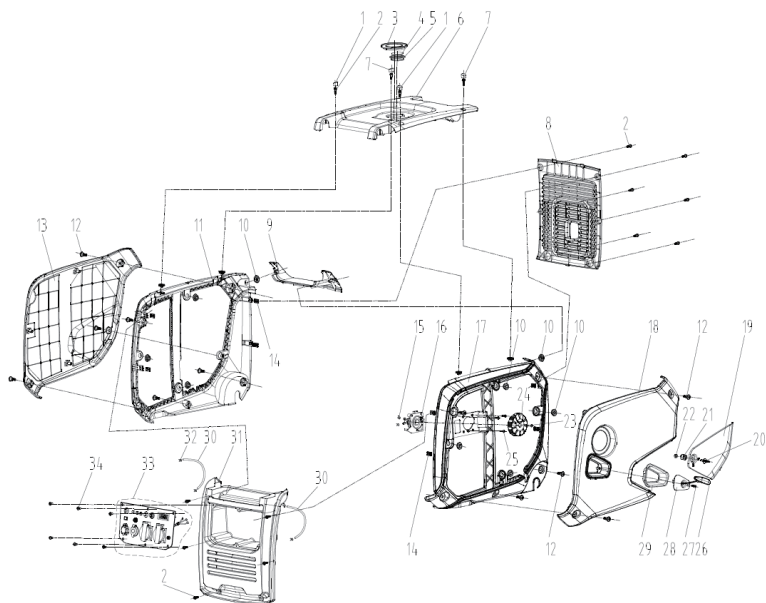


## D-ORNAMENT SHELL

| NO. | Description             | Qty | NO. | Description                                   | Qty |
|-----|-------------------------|-----|-----|-----------------------------------------------|-----|
| 1   | Ornament rubber sleeve  | 2   | 18  | Right cover                                   | 1   |
| 2   | Hexagonal step bolt     | 16  | 19  | Maintenance cover                             | 1   |
| 3   | Oil inlet rubber sleeve | 1   | 20  | Knob assy.                                    | 1   |
| 4   | Oil window              | 1   | 21  | Stop piece assy.                              | 1   |
| 5   | Rubber pad,Oil window   | 1   | 22  | Steel Hexagonal lock nut                      | 1   |
| 6   | Cover assy.             | 1   | 23  | Cross recessed pan head screw                 | 1   |
| 7   | Ornament rubber sleeve  | 2   | 24  | Knob assy.                                    | 1   |
| 8   | Muffler tail cover      | 1   | 25  | Cross recessed countersunk head tapping screw | 3   |
| 9   | Ornament shell          | 1   | 26  | Recoil handle                                 | 1   |
| 10  | Fixing rubber sleeve    | 9   | 27  | Cross recessed pan head screw                 | 1   |
| 11  | Left cover assy.        | 1   | 28  | Stop piece assy.                              | 1   |
| 12  | Hexagonalal step bolt   | 9   | 29  | Handle ornament shell                         | 1   |
| 13  | Left outer cover        | 1   | 30  | Oil pipe                                      | 2   |
| 14  | Nut                     | 12  | 31  | Panel seat assy.                              | 1   |
| 15  | Clamp                   | 2   | 32  | Clamp,Oil pipe                                | 4   |
| 16  | Start switch assy.      | 1   | 33  | Control panel assy.                           | 1   |
| 17  | Right cover assy.       | 1   | 34  | Cross recessed pan head screw                 | 6   |

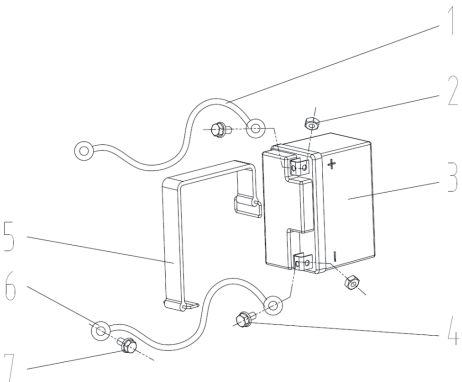

E-BATTERY ASSY

| NO. | Description           | Qty |
|-----|-----------------------|-----|
| 1   | Positive wire assy.   | 1   |
| 2   | Hexagonal flange nut  | 2   |
| 3   | Battery assy.         | 1   |
| 4   | Hexagonal bolt        | 2   |
| 5   | Battery band          | 1   |
| 6   | Negative wire assy.   | 1   |
| 7   | Hexagonal flange bolt | 1   |

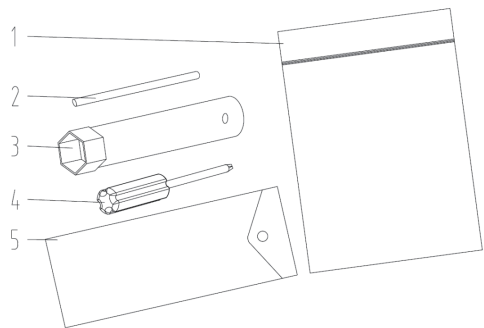

F-TOOLS

| NO. | Description   | Qty |
|-----|---------------|-----|
| 1   | Plastic bag   | 1   |
| 2   | Extension bar | 1   |
| 3   | Sleeve        | 1   |
| 4   | Screwdriver   | 1   |
| 5   | Tool bag      | 1   |