

### PARTS LIST

| Part | Description  | Qty |
|------|--------------|-----|
| 1    | Screw M5x18  | 1   |
| 2    | Drill Chuck  | 1   |
| 3    | Spindle      | 1   |
| 4    | 6200 Bearing | 1   |
| 5    | Screw M4x16  | 1   |
| 6    | Gear Wheel   | 1   |
| 7    | Steel Ball   | 1   |
| 8    | 626 Bearing  | 2   |
| 9    | 607 Bearing  | 1   |
| 10   | Rotor        | 1   |
| 11   | Stator       | 1   |
| 12   | Label        | 2   |

| Part | Description    | Qty |
|------|----------------|-----|
| 13   | Left Housing   | 1   |
| 14   | Carbon Brush   | 2   |
| 15   | Brush Holder   | 2   |
| 16   | Dial Button    | 1   |
| 17   | Screw ST4x16   | 8   |
| 18   | Right Housing  | 1   |
| 19   | Switch         | 1   |
| 20   | Screw ST4x14   | 2   |
| 21   | Cord Clamp     | 1   |
| 22   | Cord protector | 1   |
| 23   | Cord and plug  | 1   |
|      |                |     |

### ASSEMBLY DIAGRAM

