


ASSEMBLY DIAGRAM & PARTS LIST

A-Motor Part

NO.	Description	Qty	NO.	Description	Qty
A1	Right housing	1	A10	Long tube connector	1
A2	Sponge Cover	1	A11	Cable	1
A3	Filter	1	A12	Cable sleeve	1
A4	O ring	1	A13	Sleeve	4
A5	Motor	1	A14	Spring	4
A6	Block for cable	1	A15	Switch	1
A7	Motor liner	1	A16	Right housing	1
A8	Short tube connector	1	A17	Screws	7
A9	Air hose	1			

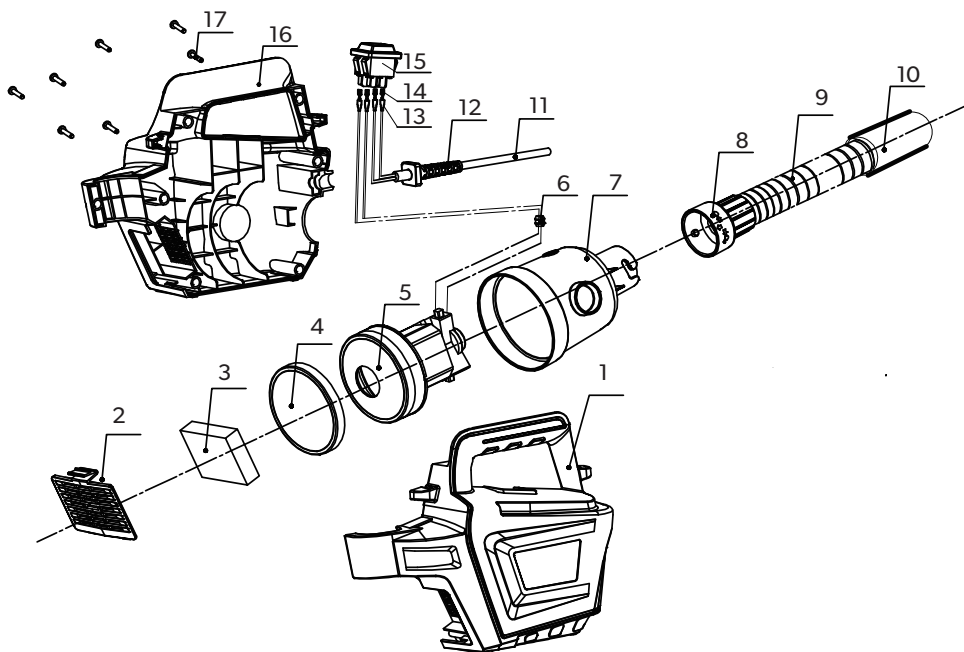

ASSEMBLY DIAGRAM & PARTS LIST

B-Pistol Part					
NO.	Description	Qty	NO.	Description	Qty
B1	Container	1	B15	Spray gun seat	1
B2	Sucker	1	B16	O-ring	1
B3	O ring	1	B17	Gun seat connection	1
B4	Nozzle screw	1	B18	Gun seat cover	1
B5	Change nozzle	1	B19	Screw	5
B6	Fixed nozzle	1	B20	Housing	1
B7	Valve needle tip	1	B21	Button for quick release	1
B8	O-ring	2	B22	Spring	1
B9	Valve needle spring	1	B23	Trigger	1
B10	O-ring	2	B24	Adjust button	1
B11	Needle ring	1	B25	Housing	1
B12	Spring	1	B26	Label	2
B13	Gun stopper	1	B27	Handle cover	1
B14	Pin	1	B28	Housing insert	1

