

PARTS LIST

Part	Description	Qty
1	HANDLE	1
2	HANDLE SCREWS 4*16	15
3	TOP COVER	1
4	MOTOR TOP COVER	1
5	SCREWS 4*12	7
6	POWER CORD STRAIN RELIEF	1
7	BOTTOM COVER	1
8	MOTOR TOP SEALING RING	1
9	AIR-OUTLET FOAM FILTER	1
10	MOTOR	1
11	PLUG FOR BOTTOM HOLE	1
12	MOTOR BOTTOM SEALING RING	1
13	MOTOR BOTTOM COVER	2
14	SAFETY VALVE	1
15	BOTTOM COVER BASKET	1
16	CLAMPS	2
17	CLAMPS BASE	2
18	CLAMPS HANDLE	2
19	TANK	1
20	CASTER SUPPORT	4
21	CASTER SUPPORT	4
22	AIR-INLET BASE	1
23	AIR-INLET BASE SEALING RING	1
24	MOTOR NOISE REDUCTION SPONGE	1
25	CAPACITANCE	1
26	SWITCH 2P	1
27	POWER CORD 4M	1
28	ø32 HOSE 1.5M	1
29	DUSTBAG 15L	1
30	ø32 LONG-SQUARE WET&DRY BRUSH	1
31	FOAM FILTER	1
32	PLASTIC TUBE EXTENSIONS	2
33	ø32 CREVICE NOZZLE	1
34	FILTER ELEMENT	1

ASSEMBLY DIAGRAM

