

PARTS LIST

Part	Description	Qty.	Part	Description	Qty.
1	Blow dust switch	1	27	Balance block	1
2	Screw st3.9x17	12	28	Pendulum board	1
3	Housing	1	29	Needle bearing 6x10x14	1
4	Guard	1	30	Bearing holder	1
5	Blow board	1	31	Fix screwing	2
6	Screw m5x12	2	32	Base set	1
7	Press board	1	33	Fix plate	1
8	Pin Ø4x24	1	34	Screw st3.9x25	2
9	Cap	1	35	Bearing 608-2z	1
10	Saw blade holder	1	36	Screwing st3.9x14	3
11	Washer Ø14xØ6.4x0.8	1	37	Dust adaptor	1
12	circlip Ø5	1	38	Rotor	1
13	Washer Ø14xØ6.4x1	1	39	Carbon brush	2
14	Steel ball Ø4	1	40	Carbon brush box	2
15	Spring	1	41	Bearing 607	1
16	Pendulum knob	1	42	Stator	1
17	Washer of insulated paper	1	43	Inductor	2
18	Cap	1	44	Alley key s3	1
19	Spring	1	45	Cord&plug	1
20	Reciprocating rod	1	46	Cord sleeve	1
21	Washer	2	47	Switch	1
22	Pin Ø4x28	2	48	Switch pole	1
23	Spring circlip Ø6	1	49	Spring	1
24	Roller	1	50	Pcb	1
25	Washer Ø11xØ6.4x0.3	1	51	Screw st2x6	1
26	big gear	1			

ASSEMBLY DIAGRAM

