


PARTS LIST

A-Motor Part		
NO.	Description	Qty
A1	Right housing	1
A2	Sponge Cover	1
A3	Filter	1
A4	O ring	1
A5	Motor	1
A6	Block for cable	1
A7	Motor liner	1
A8	Short tube connector	1
A9	Air hose	1
A10	Long tube connector	1
A11	Cable	1
A12	Cable sleeve	1
A13	Sleeve	4
A14	Spring	4
A15	Switch	1
A16	Right housing	1
A17	Screws	7

ASSEMBLY DIAGRAM

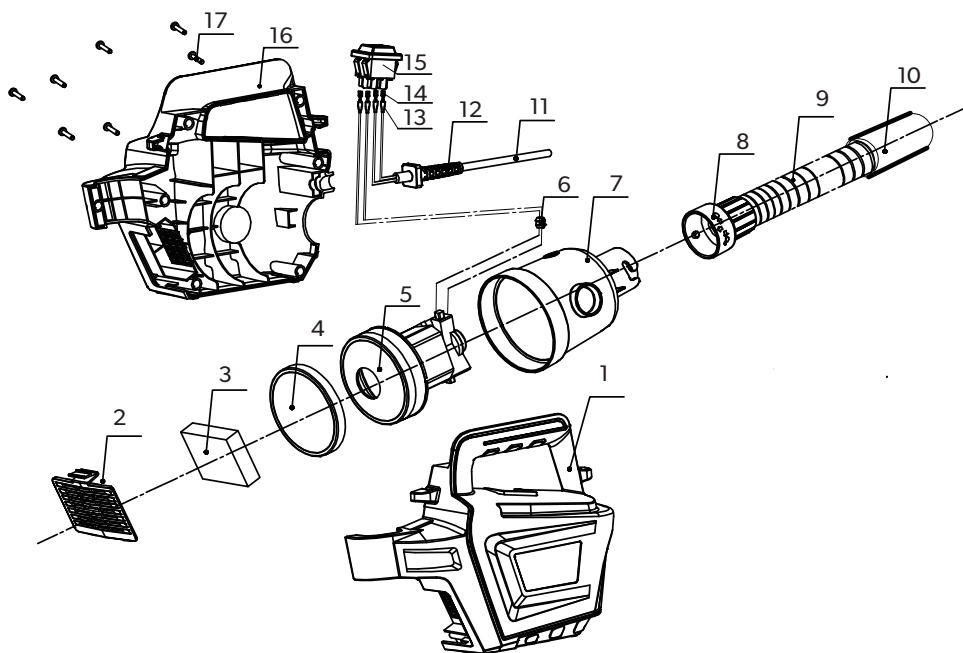


A-Motor Part

PARTS LIST

B-Pistol Part		
NO.	Description	Qty
B1	Container	1
B2	Sucker	1
B3	O ring	1
B4	Nozzle screw	1
B5	Change nozzle	1
B6	Fixed nozzle	1
B7	Valve needle tip	1
B8	O-ring	2
B9	Valve needle spring	1
B10	O-ring	2
B11	Needle ring	1
B12	Spring	1
B13	Gun stopper	1
B14	Pin	1
B15	Spray gun seat	1
B16	O-ring	1
B17	Gun seat connection	1
B18	Gun seat cover	1
B19	Screw	5
B20	Housing	1
B21	Button for quick release	1
B22	Spring	1
B23	Trigger	1
B24	Adjust button	1
B25	Housing	1
B26	Label	2
B27	Handle cover	1
B28	Housing insert	1

ASSEMBLY DIAGRAM

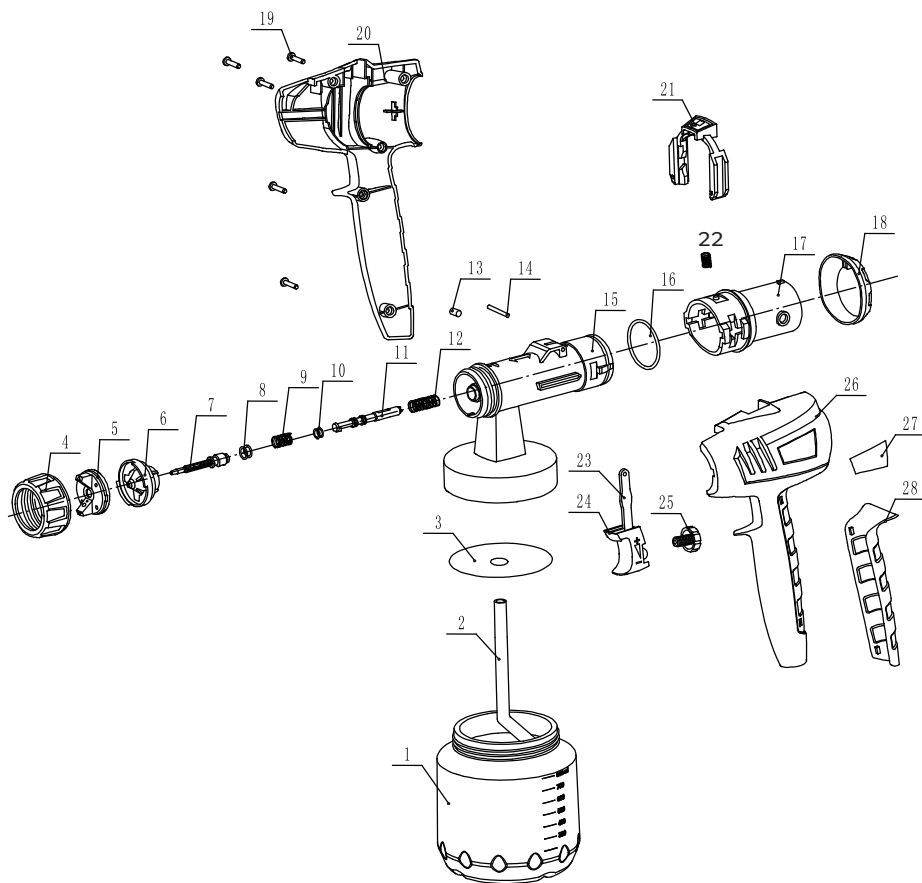

B-Pistol Part