

PARTS LIST

part	Description	Qty	part	Description	Qty
1	Screw ST4.2×14-F	11	30	Belt 4PJ246-1	1
2	Brand label	1	31	Nut M8	1
3	Side cover	1	32	Big belt pulley	1
4	Screw ST4.2×10	5	33	Bearing 6000-2Z	1
5	Baffle	1	34	Middle cover	1
6	Spring $\phi 11 \times \phi 1 \times 3$	1	35	Cutter body	1
7	Brush box 6×9×20.5	2	36	Bearing 607-2Z	1
8	Carbon brush	2	37	Windshield	1
9	Brush box cover 11×9×2.3	2	38	Screw ST4.2×55-F	2
10	Handle upper cover	1	39	Stator	1
11	Connecting screw rod	1	40	Bearing 626-2Z	1
12	Handle lower cover	1	41	Cable	1
13	Steel cover	1	42	Cable protector	1
14	Steel ball $\phi 2.5$	1	43	Cable clamp	1
15	Spring $\phi 1.85 \times \phi 0.45 \times 10$	1	44	Rotor	1
16	Dial	1	45	Bearing 608-2Z	1
17	Decorative pieces	1	46	Small belt pulley	1
18	Spring $\phi 11.5 \times \phi 2 \times 5$	1	47	Inner hexagon wrench 2.5	1
19	Front plate	1	48	Open spanner 8	1
20	Nut M6	2	49	Attachment block	1
21	Housing	1	50	Dust pipe	1
22	Screw ST4.2×10-F	1	51	Support steel	1
23	Dust board	1	52	Dust bag	1
24	Switch	1	53	Locked knob	1
25	Capacitance	1	54	Fence	1
26	Handle cover	1	55	Angle bracket	1
27	Screw ST4.2×30-F	3	56	Screw M6×14	1
28	Label	1	57	Compression knob	2
29	Belt cover	1	58	Depth indicator	1

ASSEMBLY DIAGRAM

