

PARTS LIST

Part	Description	Qty.
1	dust adapter	1
2	O-Ring	1
3	tapping screw ST3.9x12	4
4	right housing	1
5	tapping screw ST3.9x35	2
6	tapping screw ST3.9x19	6
7	inner socket scerw M5x12	1
8	retaining plate	1
9	connecting plate	2
10	socket head screw M5x10	2
11	base plate	1
12	inner socket scerw M5x9	2
13	saw blade	1
14	finger guard	1
15	guard stell wire	1
16	plunger holder spring	1
17	spring bushing	1
18	plunger	1
19	plunger holder	1
20	retaining ring	1
21	gear washer	1
22	roller	1
23	needle bearing K6x10x13	1
24	big gear	1
25	counter blance	1
26	blade -lifting plate	1
27	bearing holder	1
28	bearing 629-2RS	1
29	fan	1

Part	Description	Qty.
30	rotor	1
31	carbon brush	2
32	brush holder	2
33	bearing 607-2RS	1
34	stator	1
35	cabl 2x0.75mm	1
36	spanner M5	1
37	cable guard	1
38	cable press board	1
39	terminal block	1
40	switch	1
41	PCB	1
42	left housing	1
43	Laser power	1
44	Eclentricity seat	1
45	pin for rdler holder	1
46	spiralring for pendulm board	1
47	assistar subgssembly	1
48	stell ball Ø4	1
49	spring for the pendulam knob	1
50	clip ring Ø6	1
51	pendulum knob	1
52	washer for	1
53	laser PCB	1
54	laser button	1
55	laser	1
56	laser sping	1

ASSEMBLY DIAGRAM

