

PARTS LIST AND DIAGRAM

Part	NAME	Qty	Part	NAME	Qty
1	Outer Flange	1	23	Bearing cover	1
2	Inner Flange	1	24	Screw M4X10	2
3	Protect Guard	1	25	Rotor	1
4	Spindle	1	26	Anti-dust Ring	1
5	Dust Cover	1	27	607 Bearing	1
6	Screw M4×14	4	28	607 Bearing sleeve	1
7	Front Cover	1	29	Wind Guard	1
8	6201 Bearing	1	30	Rubber Column	2
9	Bearing cover	1	31	Stator	1
10	Screw M4X10	3	32	Housing	1
11	Wheel Gear	1	33	Carbon brush	2
12	O-ring	1	34	Screw ST3*8	4
13	Needle Bearing HK0709	1	35	Brush holder	2
14	Gear Box	1	36	Electric Ring	2
15	Screw ST4.2×22F	4	37	Switch	1
16	Circlip 6	1	38	"Cable clamping plate assembly (including ST4x14 white self-tapping screws)"	1
17	Spring	1	39	Rear Cover	1
18	Spindle Lock	1	40	Screw ST4.2X16	1
19	Sponge	1	41	Cable protect	1
20	Fixing Screw M6	1	42	Cable and plug	1
21	Pinion Gear	1	43	Spanner	1
22	608 Bearing	1	44	Side Handle	1

ASSEMBLY DIAGRAM

