

PARTS LIST AND DIAGRAM

Part	NAME	Qty	Part	NAME	Qty
1	Outer Flange	1	25	Rotor	1
2	Inner Flange	1	26	Anti-dust Ring	1
3	Protect Guard	1	27	607 Bearing	1
4	Spindle M14	1	28	607 Bearing sleeve	1
5	Dust Cover	1	29	Wind Guard	1
6	Screw M4×14	4	30	Rubber Column	2
7	Front Cover	1	31	Stator	1
8	6201 Bearing	1	32	Housing	1
9	Bearing cover	1	33	Carbon brush	1pair
10	Screw M4X10	3	34	Screw ST3*8	4
11	Wheel Gear	1	35	Brush holder	1pair
12	O-ring	1	36	Electric Ring	1pair
13	Needle Bearing HK0709	1	37	Switch	1
14	Gear Box	1	38	ScrewST4*14	2
15	Screw ST4.2×22F	4	40	Switch Button	1
16	Circlip 6	1	41	Switch Connect Pole	1
17	Spindle Lock	1	42	Cable Clamp	1
18	Spring	1	43	Cable protect	1
19	Sponge	1	44	Cable and plug	1
20	Fixing Screw M6	1	45	Screw ST4.2X12	1
21	Pinion Gear	1	46	Rear Cover	1
22	608 Bearing	1	47	Side Handle	1
23	Bearing cover	1	48	Spanner	1
24	Screw M4X10	2			

ASSEMBLY DIAGRAM

