

PARTS LIST

Part	Description	Qty	Part	Description	Qty
1	Philips screw	6	40	Hex nut, type I	2
2	Flat washer	6	41	Bracket	1
3	Side cover	1	42	Philips screw	5
4	Hex nut, type I	5	43	Small cushion	1
5	Spring washer	9	44	Hex socket screw	1
6	Base	1	45	Lower blade support	1
7	Oil cushion	4	46	Drop foot lock knob	1
8	Left arm housing	1	47	Drop foot fixing pole	1
9	Tension bolt assy	1	48	Philips screw	2
10	Extension spring	1	49	Blade protect guard	1
11	Pressure plate	2	50	Drop foot	1
12	Spring washer	3	51	Flat washer	1
13	Hex socket screw	2	52	Philips screw	2
14	Lower arm	1	53	Tube	1
15	Upper arm	1	54	Spring washer	2
16	Arm bearing	4	55	Hex screw	2
17	Blower pipe	1	56	Hex bolt	4
18	Philips screw	1	57	Big flat washer	4
19	Right arm housing	1	58	Spring washer	1
20	Spring washer	11	59	Hex bolt	2
21	Philips screw	5	60	work table support	1
22	Protect cover	1	61	Pointer	1
23	Airbag cover	1	62	Scale	1
24	Philips screw	2	63	Work table	1
25	Table lock knob	1	64	work table plate	1
26	Switch box cover	1	65	Variable speed knob	1
27	Switch	1	67	Power cord	1
28	Airbag	1	68	Philips screw	2
29	Fixing plate	2	69	Hex socket screw	1
30	Round head screw	4	70	Eccentricity pulley	1
31	Upper blade support	1	71	DC motor	1
32	Lock washer	2	72	Switch box	1
33	Hex socket screw	2	73	Strain relief	1
34	Support cushion	2	74	Philips screw	4
35	Blade	1	75	Potentiometer	1
36	Hex socket screw	1	76	Circuit board	1
37	Big cushion	1	77	Clip plate	1
38	Eccentricity connector assy	1	78	Philips screw	2
39	Ball bearing	2			

ASSEMBLY DIAGRAM

