

PARTS LIST

NO.	Part name	QTY	NO.	Part name	QTY
1	Outer Flange	1	25	Rotor	1
2	Inner Flange	1	26	Anti-dust Ring	1
3	Protect Guard	1	27	607 Bearing	1
4	Spindle	1	28	607 Bearing sleeve	1
5	Dust Cover	1	29	Wind Guard	1
6	Screw M4×14	4	30	Rubber Column	2
7	Front Cover	1	31	Stator	1
8	6201 Bearing	1	32	Housing	1
9	Bearing Gland	1	33	Carbon brush	1SET
10	Screw M4X10	3	34	Screw ST3*8	4
11	Wheel Gear	1	35	Brush Holder	1SET
12	Needle Bearing HK0709	1	36	Electric Ring	1SET
13	Gear Box	1	37	Switch	1
14	Screw ST4.2×22	4	38	Capacitor	1
15	Self-locking Lever	1	39	Push Block	1
16	Self-locking Cap	1	40	Pull Rod	1
17	Self-locking Spring	1	41	Cable Press	1
18	Sponge	1	42	Rear Cover	1
19	Fixing Screw M6	1	43	Screw ST4.2X12	1
20	Pinion Gear	1	44	Cable Protector	1
21	Rectangular Ring		45	Cable and Plug	1
22	608 Bearing	1	46	Side Handle	1
23	Gear Box cover	1	47	Spanner	1
24	Screw M4X10	2			

ASSEMBLY DIAGRAM

