

PARTS LIST

Part	Description	Qty
1	Circlip for shaft 16	1
2	Chuck outer	1
3	Positioning pin	1
4	Chuck inner	1
5	Steel ball SØ5.2	2
6	Chuck spring	1
7	Plastic ring	1
8	Circlip for shaft 12	1
9	Felt	1
10	Bearing	2
11	Shaft	1
12	Steel rod	2
13	Screw M4X12	6
14	Housing cover	1
15	Screew M5X10	4
16	Bearing clamp	2
17	Gear shaft	1
18	Bearing 7X14X9	1
19	Straight pin	1
20	Big gear	1
21	Spacing washer	1
22	Screw M4X8	2
23	Bearing 6000-2Z	2
24	Circlip 10	2
25	Oil bearing	1
26	Gear Housing	1
27	Shoe	1
28	Saw blade	1
29	Baffle plate	1
30	Insulation cover	1
31	Hex screw M5X12	2

Part	Description	Qty
32	Self tapping screw ST22x28	4
33	Plastic cover	1
34	Fixing plate	1
35	Washer Ø4	4
36	Screw M4X10	4
37	Armature (230V)	1
38	Air baffle	1
39	Bearing 607-2Z	1
40	Bearing cover	1
41	Hex key 4#	1
42	Self tapping screw ST4.2X50	2
43	Stator(230V)	1
44	4.8 socket	2
45	Motor housing	1
46	Nameplate	1
47	Carbon brush fix plate	2
48	screw ST2.9X10	2
49	Switch(230V)	1
50	Capacitor (0.33µF-3)	1
51	Right handle	1
52	Self tapping screw ST4.2X16	11
53	Power cord clamp	1
54	Power cord & plug	1
55	Cable sheath	1
56	Inductance	1
57	Power cord connector	2
58	Left handle	1
59	Carbon brush cap	2
60	Carbon brush	2
61	Carbon brush holder	2
62	Trademark	1
63	Power cord connector	1

ASSEMBLY DIAGRAM

