

### PARTS LIST

No.	Designation	Quantity	No.	Designation	Quantity	No.	Designation	Quantity
1	Air filter	1	30	Bolt	1	60	Nut	4
2	Screw	4	31	Pressure switch	1	61	Spring washer	4
3	Screw	6	32	EU quick connector	1	62	Washer	4
4	Spring washer	8	33	Safety valve	1	63	Screw	4
5	Cylinder head	1	34	Gauge	1	64	Elbow	1
6	Refrigeration	1	35	Gauge	1	65	Non-return valve	1
7	Gasket	1	36	EU quick connector	1	66	Screw	4
8	Valve plate	2	37	Regulator with bracket	1	67	Washer	4
9	Valve clack	4	38	Screw	12	68	Flat washer	4
10	Gasket	1	39	Discharge pipe	1	69	Nut	4
11	Cylinder	1	40	Release pipe	1	70	Tank	1
12	Cylinder head gasket	1	41	Bracket	1	71	Lead Wheel	1
13	Valve plate gasket	1	42	Net cover	1	72	Wheel	2
14	Piston ring	2	43	Handhold cover	1	73	Wheel pin	2
15	Piston	2	44	Gasket	1	74	Drain cock	1
16	Piston pin	2	45	Screw	1	75	Plug	1
17	Piston pin ring	4	47	Washer	1	76	Connect cable	1
18	Connecting rod	2	48	Pulley	1	77	Startup capacitor	1
19	Wave washer	1	49	Screw	6	78	Running capacitor	1
20	Oil sealing	1	50	Breath pipe	1	79	Capacitor cover	1
21	Crank	1	51	Motor	1	80	Protector	1
22	Bearing	2	52	Motor wheel	1	81	Double joint	2
23	Crank case	1	53	Belt	1	82	Bolt	2
24	Gasket	2	54	Rubber gasket	1	83	Flat washer	1
25	Crank case cover	1	55	Crank case bottom	1	84	Flange Nut	1
26	Spring washer	8	56	Nut	3	85	Flat washer	1
27	Screw	8	57	Washer	4	86	Crank case cover	1
28	Oil level washer	1	58	Flat washer	4			
29	Oil level	1	59	Screw	4			

### ASSEMBLY DIAGRAM

