

PARTS LIST

Part	Description	Qty	Part	Description	Qty
1	Crankcase	1	34	screw	4
2	Crank	1	35	wind scooper	1
3	Connecting rod	1	36	screw	2
4	Crank screw	1	37	screw	2
5	Side cover gasket	1	38	Circlip	1
6	Side cover	1	39	fan blade	1
7	Seal ring	1	40	backstand	1
8	Oil immersion lens	1	41	stator	1
9	Side cover screw	4	42	bearing	1
10	Breather	2	43	rotor	1
11	Circlip	1	44	bearing	1
12	Piston pin	1	45	oil seal	1
13	Piston	1	46	screw	8
14	Oilring	1	47	nut	8
15	Cylinder circlip	2	48	pressure switch	1
16	Cylinder gasket	1	49	40pressure gage	2
17	Cylinder	1	50	pressure relief valve	1
18	Locating pin	4	51	globe valve	2
19	Valve block	1	52	pressure regulating valve	1
20	Valve plate gasket	1	53	exhaust pipe	1
21	Valve plate	1	54	non-return valve	1
22	Discharge valve plate	1	55	Pressure relief pipe	1
23	Exhaust pressure plate	1	56	gasholder	1
24	Disc spring washers	2	57	nut	2
25	Screw	2	58	trundle	2
26	Cylinder head gasket	1	59	axle	2
27	Cylinder head	1	60	blowdown valve	1
28	Cylinder head bolts	4	61	Rubber Foot	1
29	Elbow	1	62	power line	1
30	Silencer	1	63	CE plate	1
31	Capacitance	1	64	gasket	2
32	Crimping cap	2	65	deflating valve	2
33	Spring shim	4	66	handle	1

ASSEMBLY DIAGRAM

