

PARTS LIST

Part	Description	Qty	Part	Description	Qty
1	Crankcase	1	34	Crimping cap	2
2	Crank	1	35	Spring Shim	4
3	Connecting rod	1	36	Screw	4
4	Side cover gasket	1	37	Wind Scooper	1
5	Side cover	1	38	Screw	6
6	Seal ring	1	39	Circlip	1
7	Oil immersion lens	1	40	Fan Blade	1
8	Side cover screw	4	41	Backstand	4
9	Breather	1	42	Stator	1
10	Circlip	2	43	Stator	2
11	Piston pin	1	44	Rotor	1
12	Piston	1	45	Bearing	1
13	Oilring	1	46	Oil Seal	1
14	Cylinder circlip	2	47	Screw	8
15	Crank screw	1	48	Nut	8
16	Cylinder gasket	1	49	50pressure Gage	1
17	Cylinder	1	50	Pressure Switch	1
18	Cylinder screw	4	51	Pressure Relief Valve	1
19	Locating pin	2	52	Twin Adapter	1
20	Valve block	1	53	Globe Valve	1
21	Valve plate gasket	1	54	Air Escape Valve	1
22	Valve plate	1	55	Gasket	1
23	Discharge valve plate	1	56	Pressure Relief Pipe	1
24	Exhaust pressure plate	1	57	Non-return Valve	1
25	Disc spring washers	2	58	Exhaust Pipe	1
26	Screw	2	59	Gasholder	1
27	Cylinder head gasket	1	60	Handle	1
28	Cylinder head	1	61	Blowdown Valve	1
29	Silencer	1	62	Rubber Foot	4
30	Cylinder head bolts	4	63	Power Line	1
31	Gasket	4	64	Deflating Valve	1
32	Elbow	1	65	Gasket	1
33	Capacitance	1			

ASSEMBLY DIAGRAM

