

PARTS LIST

NO.	Part name	QTY	NO.	Part name	QTY
1	Outer Flange	1	25	Rotor	1
2	Inner Flange	1	26	Anti-dust Ring	1
3	Protect Guard	1	27	Bearing 607	
4	Output Shaft	1	28	Bearing Sleeve	1
5	Anti-dust Cover	1	29	Wind Guard	1
6	Screw M4×14	4	30	Screw ST4.2×70	2
7	Front Cover	1	31	Stator	1
8	Bearing 6201	1	32	Housing	1
9	Bearing Cover	1	33	Carbon brush	2
10	Screw M4×10	3	34	Screw ST3*8	4
11	Wheel Gear	1	35	Brush Holder	2
12	Bearing HK0709	1	36	Electric Ring	2
13	Gear Box	1	37	Switch	1
14	Screw ST4.2×25	4	38	Cable Protector	1
15	Lock Pole	1	39	Cable and Plug	1
16	Spindle Lock	1	40	Screw ST4.2X12	1
17	Spring Ø8xØ0.7x11	1	41	Cable Clamp	1
18	Sponge	1	42	Screw ST4.2X14	2
19	Fixing Screw M6x1	1	43	Rear Cover	1
20	Pinion Gear	1	44	Button Pole	1
21	Rubber ring Ø22XØ25X3	1	45	Switch Button	1
22	Bearing 608	1	46	Side Handle	1
23	Clamp 45#	1	47	Spanner	1
24	Screw M4X10	2			

ASSEMBLY DIAGRAM

