


ASSEMBLY DIAGRAM AND PARTS LIST


A

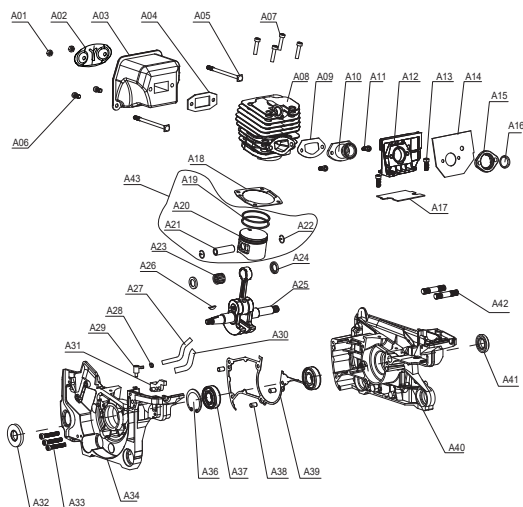

NO.	Description	Qty.
A01	Nut M5	2
A02	Muffler cover	1
A03	Muffler	1
A04	Muffler gasket	1
A05	Muffler bolt M5x84	2
A06	Screw M5x10	2
A07	Screw M5x20	4
A08	Cylinder	1
A09	Inlet pipe gasket	1
A10	Inlet pipe	1
A11	Screw M5x12	2
A12	Carburetor gasket	1
A13	Screw M5x14	2
A14	Carburetor gasket	1
A15	Spacer	1
A16	Lining ring	1
A17	Bracket gasket	1
A18	Cylinder gasket	1
A19	Piston ring	2
A20	Piston	1
A21	Piston pin	1
A22	Piston clip	2
A23	Piston roller bearing	1
A24	Washer	2
A25	Crankshaft	1
A26	Woodruff key 3xΦ10	1
A27	Vacuum pipe Φ3xΦ6x70	1
A28	Vacuum pipe clip	1
A29	Elbow	2
A30	High-temperature sleeve	1
A31	Guide(H)	1
A32	Oil seal(left)	1
A33	Screw M5x30	5
A34	Crankcase(left)	1
A36	Snap ring Φ35	1
A37	Bearing 6202	2
A38	Location pin Φ6x10	3
A39	Crankcase gasket	1
A40	Crankcase(right)	1
A41	Oil seal(right)	1
A42	Double-screw bolt M8x42A	2
A43	Piston kit c/w ring,pin,clip	1


ASSEMBLY DIAGRAM AND PARTS LIST

B

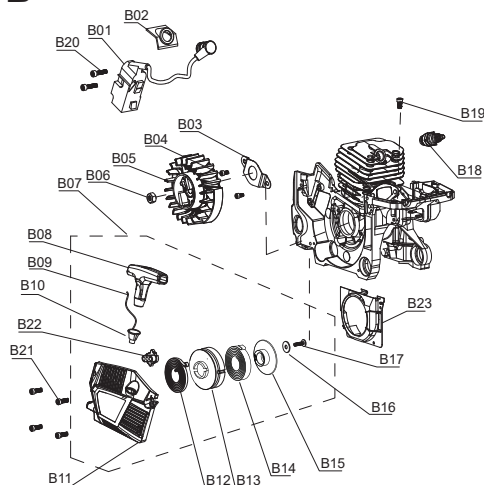

NO.	Description	Qty.
B01	Ignition coil	1
B02	Ignition cover	1
B03	Oil seal plate	1
B04	Screw M4x8	2
B05	Flywheel	1
B06	Nut M8x1	1
B07	Start assy	1
B08	Start knob	1
B09	Start roop	1
B10	Rope.mouth washer	1
B11	Starter cover	1
B12	Start spring	1
B13	Start reel-big	1
B14	Recoil spring	1
B15	Start reel-small	1
B16	Washer $\phi 5.2 \times \phi 16 \times 1$	1
B17	Screw M5x16	1
B18	Spark plug	1
B19	Screw M5x10	1
B20	Screw M5x20	2
B21	Screw M5x14	4
B22	Lh guide	1
B23	Fan cover	1


C

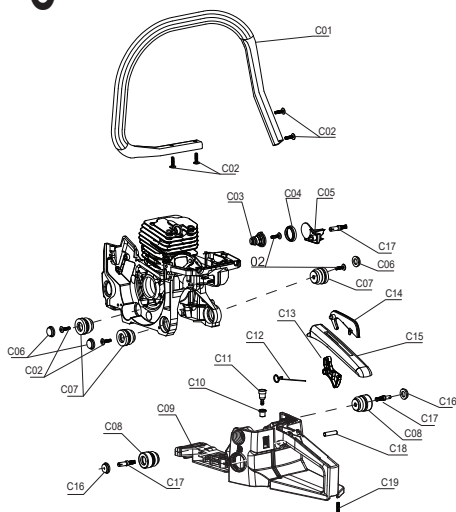

NO.	Description	Qty.
C01	Front handle comp	1
C02	Screw ST4.8x14F	8
C03	Tower spring	1
C04	Tower spring seat	1
C05	Chain catcher	1
C06	Damper cover	3
C07	Crankcase damper	3
C08	Fuel tank damper	2
C09	Fuel tank	1
C10	Balancer seat	1
C11	Balancer assy	1
C12	Trigger spring	1
C13	Trigger	1
C14	Throttle interlock arm	1
C15	Rear handle cover	1
C16	Fuel tank damper cover	2
C17	Screw	3
C18	Trigger pin $\phi 6 \times 25$	1
C19	Screw ST3.9x20F	1


ASSEMBLY DIAGRAM AND PARTS LIST

D

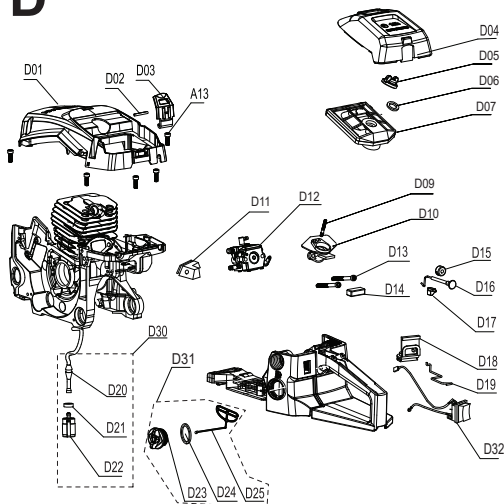

NO.	Description	Qty.
D01	top cover	1
D02	Pin $\Phi 3 \times 31$	1
D03	Cover lock-H	1
D04	Air filter cover	1
D05	Air filter knob	1
D06	Air filter knob washer	1
D07	Air filter	1
D09	Double-screw bolt M5x39	1
D10	Mainfold	1
D11	Guide(T)	1
D12	Carburetor	1
D13	Screw M5x50	2
D14	Mainfold damper	1
D15	Choke rod damper	1
D16	Choke rod	1
D17	Damper	1
D18	Dust shield	1
D19	Throttle rod	1
D20	Fuel pipe	1
D21	Pendant	1
D22	Fuel filter	1
D23	Fuel cap	1
D24	Washer	1
D25	Element	1
D30	Fuel pipe assy	1
D31	Fuel cap assy	1
D32	On-off switch	1
A13	Screw M5x14	5


E

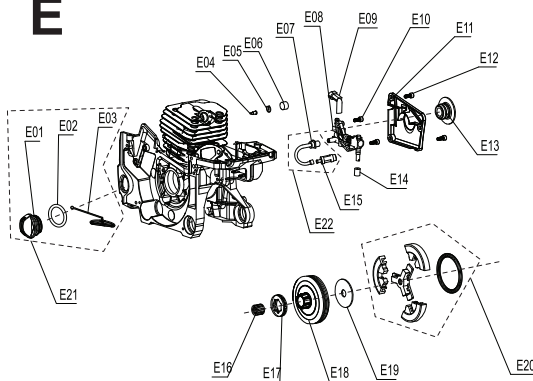

NO.	Description	Qty.
E01	Oil cap	1
E02	Washer	1
E03	Element	1
E04	Oil tank valve	1
E05	Oil tank valve retainer	1
E06	Sponge	1
E07	Oil pipe	1
E08	Oil pump	1
E09	Oil pump pipe	1
E10	Screw M4x14	2
E11	Oil pump cover	1
E12	Screw M4x10	3
E13	Worm gear	1
E14	Sealed sponge	1
E15	Oil filter	1
E16	Clutch roller bearing $\Phi 12 \times 15 \times 14.5$	1
E17	Sprocket	1
E18	Clutch drum	1
E19	Clutch washer	1
E20	Clutch assy	1
E21	Oil cap assy	1
E22	Oil pipe assy	1


ASSEMBLY DIAGRAM AND PARTS LIST

F

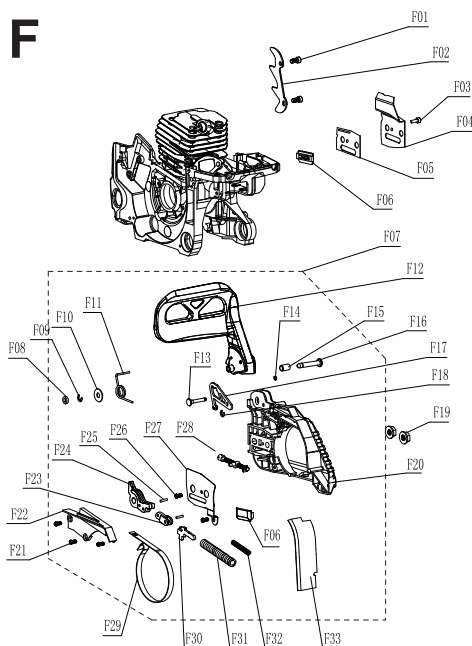

NO.	Description	Qty.
F01	Screw M5x10	2
F02	Spike bumper	1
F03	Screw M4x8	1
F04	Guide plate	1
F05	Guide plate gasket	1
F06	Chain guide	2
F07	Brake assy	1
F08	Brake damper	1
F09	Snap ring Φ5	1
F10	Washer Φ6.2x18x1	1
F11	Brake spring	1
F12	Front hand guard	1
F13	Stopper pin	1
F14	Snap ring Φ3	1
F15	Front hand jacket	1
F16	Guard pin	1
F17	Stopper plate	1
F18	Snap ring Φ4	1
F19	Nut M8x1.25	2
F20	Clutch cover	1
F21	Screw ST3.9x10F	3
F22	Brake spring cover	1
F23	Brake lever(sub)	1
F24	Brake lever(main)	1
F25	Brake lever pin 3x8.8	2
F26	Screw ST3.9x8F	2
F27	Tensioned plate	1
F28	Tensioned set	1
F29	Brake band	1
F30	Brake arm	1
F31	Brake spring(main)	1
F32	Brake spring(sub)	1
F33	Sawdust protector	1

G

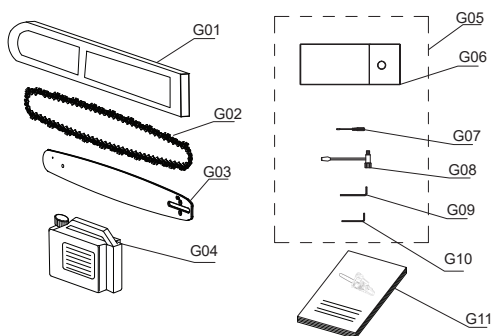

NO.	Description	Qty.
G01	Bar cover	1
G02	Saw chain	1
G03	Guide bar	1
G04	Mixture bottle	1
G05	Tools	1
G06	Tooskit	1
G07	Screwdriver	1
G08	Wrench	1
G09	S4 Hexagon ring spanner	1
G10	S3 Hexagon ring spanner	1
G11	User's manual	1